

FC3-261

OPERATOR'S MANUAL MULTIFUNCTION TOOL CARRIER

Kubota

Code No. W7800-04453

FC3-261



READ AND SAVE THIS MANUAL

EN

OPERATOR'S MANUAL6
Translation of the originals instructions

ILLUSTRATIONS AND DIAGRAMS.....21



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT: Indicates that equipment or property damage could result if instructions are not followed.

NOTE: Gives helpful information.

CONTENTS

NOTES FOR PRODUCT DISPOSAL IN THE EUROPEAN COMMUNITY.....	8
0. EC PLATE	8
1. SERIAL NUMBER	8
2. FOR OUR CUSTOMERS	8
3. INTENDED USE	8
4. FORESEEABLE, UNPERMITTED USE.....	9
5. OPERATOR'S RESPONSIBILITY.....	9
6. SAFETY REQUIREMENTS.....	9
6.1 SLOPES.....	10
6.2 TRANSPORTATION - UNLOADING - LIFTING.....	11
7. TECHNICAL CHARACTERISTICS	11
7.1 MACHINE WEIGHT.....	11
7.2 COMPATIBLE ATTACHMENTS.....	12
7.3 NOISE LEVEL.....	12
7.4 VIBRATIONS.....	12
8. COMMANDS AND FUNCTIONS.....	13
9. USE OF COMMANDS AND FUNCTIONS.....	13
9.1 FORWARD - REVERSE MOVEMENT.....	13
9.2 PARKING BRAKE PEDAL	13
9.3 DIFFERENTIAL LOCK.....	13
9.4 BYPASS LEVER.....	13
9.5 ACCELERATOR LEVER.....	13
9.6 POWER TAKE-OFF.....	13
9.7 HYDRAULIC LIFTING AND QUICK CONNECTORS.....	13
9.8 HYDRAULIC ELEVATOR HOPPER TILTING.....	13
9.9 BATTERY CUT-OFF SWITCH.....	13
9.10 ECO-DRIVE.....	13
10. BUILT-IN COMPUTER.....	13
10.1 DESCRIPTION OF COMPUTER FUNCTIONS TOUCH SCREEN BUTTONS.....	14
10.2 MANAGING ERRORS	14
10.3 MANAGING MAINTENANCE FREQUENCY	14
10.4 MICROSWITCH DIAGNOSTICS	15
10.5 MULTIFUNCTION BUTTON.....	15
11. STARTING UP THE ENGINE	15
12. HANDLING THE MACHINE	15
13. GRASS CUTTING AND AUTOMATIC COLLECTION SYSTEM	16
14. STOPPING THE ENGINE.....	16
15. REFUELLING	16
16. ROUTINE MAINTENANCE.....	16
16.1 TOPPING UP THE ENGINE OIL.....	16
16.2 TOPPING UP THE COOLANT.....	16
16.3 TOPPING UP THE HYDRAULIC SYSTEM OIL	16
16.4 TOPPING UP THE FRONT AXLE OIL	16
16.5 BATTERY	16
16.6 AIR FILTER.....	16
16.7 RADIATOR GRILLE.....	16
16.8 ENGINE OIL FILTER.....	17
16.9 FUEL FILTER.....	17
16.10 TYRE PRESSURE	17
16.11 ADJUSTING THE BELT TENSION	17
16.12 CLEANING THE MACHINE.....	17
16.13 OIL TANK FILTERS.....	17
16.14 PTO GREASING NIPPLE	17
16.15 GREASING THE PEDAL.....	17
16.16 TURBINE BELT ADJUSTMENT SPRING.....	17
16.17 PTO SPRING TENSIONING.....	17
16.18 PLATFORM OPENING.....	17
17. SPECIAL MAINTENANCE.....	17
18. MACHINE INACTIVITY.....	17
19. DRIVING ON THE ROAD	18
20. SAFETY LABELS	18
20.1 KEY.....	18
21. GENERAL NOTES.....	19
22. MAINTENANCE TABLE	19
23. ERROR CODES	20
24. ROLLOVER PROTECTION STRUCTURE (ROPS).....	20

NOTES FOR PRODUCT DISPOSAL IN THE EUROPEAN COMMUNITY



Do not dispose of the product as solid urban waste. Take it to an authorised collection centre. Abandoning the attachment may cause serious damage to the environment. If there are batteries inside the attachment, they must be removed before disposing of it. The batteries must be disposed of separately, in the appropriate collection points, as they contain highly toxic substances. The crossed-out bin symbol in the figure indicates that it's strictly forbidden to dispose of the attachment with normal waste.

0. EC PLATE

See figure 0.

This label is merely an example. Refer to the one attached to the machine.

- | | | |
|---------------------------|-------------------------|---------------|
| 1) Manufacturer's address | 4) Power | 7) Type |
| 2) Model | 5) Year of construction | 8) Plate code |
| 3) Weight | 6) Machine name | |

1. SERIAL NUMBER

See figure 1.

2. FOR OUR CUSTOMERS

- We're proud to have you as our customer.
- Before start-up, study this manual carefully to ensure a better understanding of the machine and the use and maintenance tips given.
FC3-261 machines can be equipped with various types of attachment, it is therefore important for the user to study not only this manual but also the one relating to the specific attachment that will be mounted.
- The machines have been designed and built to ensure the best work in the most diverse conditions; as always however, the quality of the work is dependent on routine maintenance.
- For more specific information and tips not contained in this handbook, contact your dealer who will be happy to answer all your questions concerning the use and maintenance of these machines.

3. INTENDED USE

FC3-261 is a multifunction tools carrier machine designed primarily for professional use. "Intended use" includes:

- Mowing,
- Cleaning surfaces,
- Bulldozing,
- Grass shredding,
- Aeration, scarifying.

We disclaim all responsibility if the machine is fitted with accessories or attachments other than those indicated in this manual. Use only the parts and accessories purposely designed by Kubota Gianni Ferrari for the specific model you have purchased.



WARNING: Use of the ROPS protection structure and the safety belts is compulsory. However, even when using the ROPS protection structure, work on slopes that are steeper than those indicated in the "Slopes" paragraph of this handbook is not permitted.

4. FORESEEABLE, UNPERMITTED USE

Any type of use not indicated in the "Intended Use" section is not allowed.

The use of other equipment not listed in this manual is considered as "improper use" and dangerous because it is not covered by our risk analysis.

Other people (except for the driver), things or animals must not be carried on the machine.

It is absolutely forbidden to use the machine without having consulted this booklet.

Any transformation or modification of the machine not envisaged by this manual is therefore prohibited.

Use of the machine is prohibited unless it is in perfect working order, so always carry out the recommended checks and maintenance before using it.

Do not allow children or teenagers to use it.

Do not use the machine while wearing sandals or with bare feet.

The machine must not be used as a hoist.

Never switch on the machine engine in closed places or places without adequate ventilation. The exhaust fumes are toxic.

Do not allow flames or sparks to develop near the fuel tank or the battery.

Never park the machine on a slope.

Do not use the machine for towing.

It is absolutely forbidden to use the machine without correctly installed equipment.

Tampering with the machine speed control seals is strictly forbidden.

Do not use the machine in adverse weather conditions, especially when there is lightning.



WARNING: It is strictly forbidden to extend any parts of your body out beyond the limits of the backrest while the hopper is moving back to its closed position (See figure 9.8)

5. OPERATOR'S RESPONSIBILITY

The operator is responsible for carefully reading this manual and understanding the correct way to use, lubricate and service the machine, as explained in the instructions.

The operator is responsible for checking the machine and repairing or replacing those parts subject to continual wear (that could cause harm to other people).

Operators are liable for damage caused to third parties, themselves and things arising from improper use of the machine and in contrast with the instructions provided in this manual.

The machine must be used and serviced exclusively by people who are familiar with its specific characteristics and have fully understood the safety requirements.

Never allow children or teenagers to use the machine. Local regulations may indicate a minimum age for the operator.

Use only the couplings, parts and accessories supplied by our company for the specific model you have purchased. For more information, contact your dealer.

Any transformation or modification of the machine not envisaged by this manual is therefore prohibited.

NOTE: When using the machine, the operator must scrupulously observe the safety precautions provided in this manual, together with accident prevention regulations, other general safety regulations and the provisions defined by the occupational health authorities.

6. SAFETY REQUIREMENTS

A CAUTIOUS OPERATOR IS THE BEST OPERATOR

Many accidents could be avoided just by observing the precautions given in this manual.

GENERAL PART

- 1) Read every part of this manual carefully. Use of the machine by persons who have not read and understood this manual is expressly forbidden.
- 2) Before using the machine, always inspect it thoroughly. Pay attention to any malfunctioning and to loose bolts, screws or brushes, as well as any other parts that may be damaged or loose. Use of the machine is prohibited unless it is in perfect working order, so always carry out the recommended checks and maintenance before using it.
- 3) Get familiar with all the single parts and the necessary checks before starting up the machine.
- 4) The machine may only be used by one informed adult. Do not allow children or teenagers to use it. Do not use the machine if you are in poor physical condition.
- 5) Keep people and objects at a safe distance, as explained below.
- 6) Use only parts and accessories supplied by us, and do not allow any modification or transformation to be made. For more information, contact your dealer.
- 7) If the safety and warning signs are damaged, illegible or missing, have them replaced. Check the list of signs in the relative safety section. Keep the signs free of dirt, dust or mud.
- 8) Keep your body, especially hands and feet, away from moving parts.

- 9) Do not use the machine if the covers and guards are not in good condition and correctly positioned.
Do not use the machine if the safety elements are not in good working order.
Never tamper with the safety elements for any reason whatsoever.
- 10) If you hit or pick up an object, stop the machine straight away. Disconnect the PTO and switch off the motor, then lay the attachment on the ground and check it thoroughly. Before starting it up again, make sure the best working conditions have been restored.
- 11) When you are not using the machine, deactivate the PTO* (*power take-off that starts the attachment) and lower it to the ground. Switch off the motor and remove the key.
- 12) Before performing maintenance work on the machine, make sure that it is OFF (**NOTE:** make sure that no unintentional start-up can occur). If you have to work on the electrical system, disconnect the batteries.
- 13) Use the machine and equipment at speeds compatible with safety requirements and the characteristics of the model used.
- 14) Apply extreme caution when using the machine on slopes. Reduce the speed to a minimum.
- 15) During use and maintenance of the machine, wear suitable clothing: goggles, gloves, safety, non-slip footwear and other protective clothing.
- 16) Use the machine in good visibility conditions.
- 17) All operators must receive professional, practical training. This training must focus on:
 - the need to pay attention and concentrate when working with machines with a seated driver.
 - control of a machine that slides down a slope cannot be regained by using the brakes.
 The main reasons for loss of control are:
 - a) poor wheel grip;
 - b) driving too fast;
 - c) inadequate braking;
 - d) type of machine unsuitable for work required;
 - e) a lack of awareness of the effect of the ground conditions and slopes in particular;
 - f) incorrect coupling of attachments and uneven loading as a result.
- 18) When working, always wear resistant footwear and long trousers. Do not use the machine while wearing sandals or with bare feet.
- 19) Carefully inspect the area where the machine is to be used. Eliminate any objects that the machine might pick up and throw.
- 20) Always disconnect the PTO when moving the machine from one area to another.
- 21) The towing hook should only be used if the machine is faulty.
- 22) Whenever you leave the machine unattended, even just for a moment, engage the parking brake.
- 23) Pay particular attention to people and obstacles when making reverse movements.
- 24) It is the employer's responsibility to assess and adopt the most suitable personal protective equipment.
- 25) Pressurised hydraulic fluid may penetrate and seriously damage the skin, seek medical advice immediately.

6.1 SLOPES

See figure 6.1

- Do not use the machine on longitudinal slopes of more than 12°.
- Do not use the machine on lateral slopes of more than 12°.
- While working, do not tackle slopes of any kind (lateral or longitudinal) with the deck and hopper raised.
- Do not stop or start the machine suddenly when going up or down a slope.
- Run the machine at low speed on slopes and during tight turns.
- Pay attention to any hidden bumps, holes or other hazards. If the ground is uneven, the machine may tip over more easily.
- Do not operate near riversides, ditches or embankments; the machine could suddenly overturn if a wheel crosses their edges or the ground gives way.

6.2 TRANSPORTATION - UNLOADING - LIFTING See figure 6.2

The machine is heavy and can lead to serious crushing injuries.

Load and unload it with caution using loading ramps.

Transport the machine on a type-approved trailer. During transportation, apply the parking brake and hold the machine in place with the aid of type-approved belts, chains or ropes.

IMPORTANT: If the machine is packed and placed on its pallets, it can be moved with the forklift. Minimum capacity 1200 kg

EN



WARNING: The parking brake is not sufficient to block the machine during transportation. Secure the machine to the vehicle appropriately using type-approved devices.

7. TECHNICAL CHARACTERISTICS See figure 7.

measurements in mm.

****** See the attachment technical manual

Engine	FC3-261
	KUBOTA D 1105
Power (kW)	18.2
Displacement (cc)	1.123
N° Cylinders	3
rpm	3000
Wheel drive	4 wheel drive with differential lock
Type of drive	hydrostatic
Service brake	hydrostatic
Parking brake	Mechanical with disc
Max speed (Km/h)	13,7
Fuel tank capacity (L)	30
Collector capacity (L)	800

7.1 MACHINE WEIGHT

Model	Weight (kg)
FC3-261	1000

7.2 COMPATIBLE ATTACHMENTS

Consult the technical manual specifically for the attachment.

NUMBER OF BALLAST		Machine		Machine	
		FC3-261	Fig.	FC3-261 (Germany)	Fig.
Code	Attachments				
RC50C-FC3	Mower Deck	 x 8	7.2.1	 x 10	7.2.2
RCR51C-FC3	Mower Deck	 x 8	7.2.1	 x 14	7.2.3
VACUUM HOSE-FC3	Vacuum Hose	 x 8	7.2.1	-	-
RCF53C-FC3	Flail Mower	 x 14	7.2.3	 x 24	7.2.4
SNOW BLADE 150-FC3	Snow Blade	 x 8	7.2.1	-	-

Contact an authorised assistance centre.

7.3 NOISE LEVEL

SOUND POWER	108.7 dB (A) ± 2.8
SOUND PRESSURE IN OPERATOR'S POSITION	97.9 dB (A) ± 3

7.4 VIBRATIONS

	FC3-261
Exposure of upper limbs to acceleration	3,16 ± 0,41 m/s ²
Exposure of body to acceleration	0,57 ± 0,08 m/s ²

8. COMMANDS AND FUNCTIONS See figure 8.

The machine driving system uses the following commands:

- | | | |
|------------------------------------|----------------------------------|--|
| 1) Forward pedal | 13) Seat tilt adjustment | 25) PTO enabling |
| 2) Reverse pedal | 14) Light switch | 26) Accelerator /Eco-Drive lever |
| 3) Parking brake pedal | 15) Attachment lifting | 27) Hopper cover rod |
| 4) Differential lock pedal | 16) Hopper tilting | 28) Steering column adjustment |
| 5) Bipolar nebuliser socket | 17) Elevator activation | 29) Horn |
| 6) Bypass lever | 18) Quick connector (AUX) | 30) Light adjustment |
| 7) Battery cut-off switch | 19) Emergency light switch | 31) Turn signal switch |
| 8) Emergency socket | 20) Auxiliary hydraulic services | 32) Computer |
| 9) Steering wheel | 21) Bipolar socket switch (5) | 33) Ignition key |
| 10) Seat height adjustment | 22) Turbine ON-OFF | 34) Rotating lamp light switch |
| 11) Seat longitudinal adjustment | 23) Light indicator | 35) Service brake pedal (*) |
| 12) Suspension rigidity adjustment | 24) Direction light indicators | (Depending on country where the machine is used) |

9. USE OF COMMANDS AND FUNCTIONS

9.1 FORWARD - REVERSE MOVEMENT See figure 9.1

- A. Forward
- B. Reverse

9.2 PARKING BRAKE PEDAL See figure 9.2

9.3 DIFFERENTIAL LOCK See figure 9.3

9.4 BYPASS LEVER See figure 9.4

IMPORTANT: Avoid towing the machine for long distances with the bypass engaged.

9.5 ACCELERATOR LEVER See figure 9.5

9.6 POWER TAKE-OFF See figure 9.6

IMPORTANT: When collecting grass, always set the turbine ON-OFF switch to ON, before activating the PTO.

The turbine control and the PTO control are independent, so once the turbine is activated, it is not necessary to deactivate it during PTO engagement and disengagement operations

IMPORTANT: Do not activate/deactivate the turbine with the PTO engaged.

9.7 HYDRAULIC LIFTING AND QUICK CONNECTORS See figure 9.7

- 2. Hydraulic lifting lever (A-B)
- 2. Quick connector lever

9.8 HYDRAULIC ELEVATOR HOPPER TILTING See figure 9.8

- 1. Hopper tilting lever (G-F)
- 1. Hopper lifting lever (E-D)



WARNING: When driving the machine, especially on bends, the hopper must never be protruding.

9.9 BATTERY CUT-OFF SWITCH See figure 9.9

9.10 ECO-DRIVE See figure 9.10

10. BUILT-IN COMPUTER

10.1 DESCRIPTION OF COMPUTER FUNCTIONS TOUCH SCREEN BUTTONS

See figure 10.1

1. **Display**
2. **Open menu button (Touch screen)**
3. **Change display colour button (Touch screen)**
4. **Alarm button (Touch screen)**
5. **Settings button (Touch screen)**
6. **Maintenance button (Touch screen)**
7. **Diagnostics button (Touch screen)**
8. **Home screen button (Touch screen)**
9. **Error register button (Touch screen)**

* the touch screen works by holding down the buttons for at least 2 seconds

* holding down button (8) returns to the home screen

The display has an area for the various indicator lights:

10. **Total hour counter:** indicates the number of machine operating hours up until that moment. Maximum hours: 9999,9. When this number is reached, the counter restarts from 0.
10. **Partial hour counter:** indicates the number of machine operating hours since the last reset made by the user. Maximum value of partial hour counter: 999.9 hours. When this value is reached, the counter restarts from 0.
10. **Any error messages**
11. **Engine water temperature:** indicates the temperature of the engine water, in degrees Celsius.
12. **Clock.**
13. **Fuel level:** on if the fuel level is low.

The lower part of the display has an area for the various indicator lights:

14. **Alternator charge:** if the alternator is recharging, this indicator light is OFF (engine switched on); if the alternator isn't charging, the light is ON (engine switched off, or alternator fault).
15. **Lights:** this indicator light is ON if the lights are switched on, and OFF when the lights are deactivated.
16. **Parking brake:** this indicator light is ON when the parking brake is engaged. An intermittent acoustic alarm warns the user if the vehicle moves (pedal pressed) while the brake is engaged and the engine is switched on.
17. **Fuel:** this indicator light flashes for 10 seconds when the diesel runs out, and is accompanied by an acoustic signal.
18. **Engine oil pressure:** this indicator light comes on when the engine oil pressure level is insufficient. In this case, there is also an intermittent acoustic signal when the engine is switched on, and this signal persists until the problem is resolved or the machine is switched off.
19. **Triangle with exclamation mark:** appears in the event of an error and/or malfunctioning on at least one machine part.
20. **Spanner:** appears if one scheduled maintenance task or more has expired.
21. **Micro seat:** appears when the operator is not sitting.
22. **Air filter clogged:** appears if the filter is clogged
23. **Pre-heating glow plugs:** stays on when pre-heating engine glow plugs
24. **Oil filter clogged:** appears if the filter is clogged

10.2 MANAGING ERRORS See figure 10.2

The error codes appear on the display when detected by the control unit.

- To view errors, press the button (2) at the bottom (Fig.10.1a), press the triangle (4) to open the alarm menu (Fig.10.1b), from which all errors can be viewed in detail (see appropriate image (chap. 10.2).
- To exit the "ALARMS" mode, press ESC to go to the menu page, or press on the button "represented by a small house" to go to the home page.

The list of errors, with the cause and solution, can be seen in chap. 23.

10.3 MANAGING MAINTENANCE FREQUENCY See figure 10.3

- On switching on the vehicle, if necessary, a spanner will appear on the display, alerting the user that the maintenance intervals have expired.
- To access the maintenance menu, press the button (2) at the bottom (Fig.10.1a), press the spanner symbol (6) (Fig.10.1b), and the intervals will be displayed (see specific image (Fig.10.3).
- If the task has already been carried out, the message can be reset by pressing the reset button (Fig. 10.3).
- If the task has not yet been carried out, the spanner symbol (ref. 20) will remain on the display to remind the user of the need to do it.
- To exit the "MAINTENANCE" mode, press ESC to go to the menu page, or press on the button "represented by a small house" to go to the home page.

10.4 MICROSWITCH DIAGNOSTICS

See figure 10.4

DISPLAY	CONTROLLED SWITCH	OPEN STATE		CLOSED STATE	
P1	PTO	<input type="checkbox"/>	PTO OFF	<input checked="" type="checkbox"/>	PTO ON
P2	FULL HOPPER	<input type="checkbox"/>	EMPTY HOPPER	<input checked="" type="checkbox"/>	FULL HOPPER
P3	PARKING BRAKE	<input type="checkbox"/>	BRAKE ON	<input checked="" type="checkbox"/>	BRAKE OFF
P4	SEAT	<input type="checkbox"/>	MAN ON GROUND	<input checked="" type="checkbox"/>	MAN ON BOARD
P5	HOPPER CLOSED	<input type="checkbox"/>	HOPPER OPEN	<input checked="" type="checkbox"/>	HOPPER CLOSED
P6	LID	<input type="checkbox"/>	LID OPEN	<input checked="" type="checkbox"/>	LID CLOSED

- Switch on the machine and press the button (2) (Fig.10.1a) until the menu appears (See fig. 10.1b)
- Press the button (7) to open the screen referring to microswitch diagnostics (See fig. 10.4)
- The states corresponding to the switches are graphically displayed with a solid circle (switch closed) or blank circle (switch open) as shown in the table.
- To exit the "DIAGNOSTICS" mode, press ESC to go to the menu page, or press on the button "represented by a small house" to go to the home page.

10.5 MULTIFUNCTION BUTTON

See figure 10.1a

You can access and control some basic machine functions using this button such as:

- Setting the clock
- Microswitch diagnostics
- Resetting of maintenance frequency
- Resetting of partial counter
- List of active errors
- Error register list. (See fig.10.5b)

Setting the clock:

1. - Press the button (2) (Fig.10.1a) until the menu appears (See fig. 10.1b)
2. Press the button (5) to open the time setting screen (Fig.10.5a)
3. To adjust the minutes, hold down the button for more than approx. 2 seconds. (the value will turn yellow See fig. 10.5a)
4. To increase the minutes, press the two buttons represented by two arrows. Each time the button is pressed, it increases by one unit. The same holds for adjusting the date.
5. From this screen, the partial counter (TRIP) can also be reset
6. Before exiting, press the "SAVE" button
7. To exit the "settings" mode, press ESC to go to the menu page, or press on the button "represented by a small house" to go to the home page.

11. STARTING UP THE ENGINE

See figure 11.

- 1) Sit correctly on the seat.
- 2) Make sure that the battery cut-off switch is in the ON position.
- 3) Make sure that the PTO switch is completely disengaged.
- 4) Make sure that the parking brake pedal is fully engaged.
- 5) Turn the ignition key to ON and wait for the glow plugs to preheat.
- 6) Turn the ignition key towards the symbol to switch on the engine.
- 7) With temperatures of below 0° C keep the engine running at a medium speed for at least 5 minutes.

12. HANDLING THE MACHINE

See figure 12.

- 1) Adjust the accelerator lever.
- 2) Disengage the parking brake.
- 3) Select the desired speed using the pedals on the RH side (A and B).
- 4) The steering wheel controls the rear wheels.

IMPORTANT: To stop the machine, simply release the forward or reverse pedal; once stationary, block the parking brake pedal.

NOTE: Until you are an expert driver, drive slowly. Keep people and animals at a distance of at least 3 m.

13. GRASS CUTTING AND AUTOMATIC COLLECTION SYSTEM

See figure 13.

14. STOPPING THE ENGINE

- 1) Stop the machine.
- 2) Disengage the PTO switch
- 3) Engage the parking brake.
- 4) Fully lower the attachment using the special lever.
- 5) Make sure that the hopper is fully retracted.
- 6) Reduce the engine to idling speed.
- 7) Move the ignition key from ON to STOP.
- 8) Turn the battery cut-off key to OFF.

15. REFUELLING See figure 15.

Refuelling must be carried out in an open or sufficiently ventilated area with the engine switched off and no flames or sparks. Also ensure that the fuel is the one indicated on the label affixed to the tank.



WARNING! Fuel is highly flammable.

Keep fuel in special containers. Only refuel in open areas and do not smoke. Add the fuel before starting the engine. Never remove the tank cap or add fuel when the engine is running or is hot.

If there is a fuel leak, do not attempt to start the engine but move the machine away from the area where the leak occurred and do not create sources of ignition until the vapours have dissipated. Put the tank caps back on correctly and put the fuel container back in place.

Never store the machine with fuel in its tank inside a building where the vapours can come into contact with a naked flame or spark.

Leave the engine to cool before storing the machine in an enclosed area.

16. ROUTINE MAINTENANCE

When carrying out maintenance operations, use only original spare parts to ensure maximum reliability for the machine.

Before carrying out maintenance work, carefully read the instructions provided in paragraph 3 "Safety Requirements".

If you have to work on the machine with the hopper raised, make sure that the mechanical safety device "S" is correctly inserted (see fig. 16).

16.1 TOPPING UP THE ENGINE OIL See figure 16.1

• KUBOTA D1105

Refer to the engine User and Maintenance Manual.

OIL SHELL SPIRAX S3 T

16.2 TOPPING UP THE COOLANT See figure 16.2

16.3 TOPPING UP THE HYDRAULIC SYSTEM OIL See figure 16.3

SHELL HYDRAULIC S1 M 46

16.4 TOPPING UP THE FRONT AXLE OIL See figure 16.4

OIL SHELL SPIRAX S3 T

16.5 BATTERY

The battery liquid doesn't need to be checked or topped up.

16.6 AIR FILTER See figure 16.6

Regular checks.

16.7 RADIATOR GRILLE See figure 16.7

Regular checks.

16.8 ENGINE OIL FILTER See figure 16.8

Refer to the engine User and Maintenance Manual.

NOTE: Remove the partition A to carry out maintenance on the engine oil filter.

16.9 FUEL FILTER See figure 16.9**16.10 TYRE PRESSURE** See figure 16.10

If the front tyres have been inflated with different pressure values, the blades will cut the grass at different heights.

16.11 ADJUSTING THE BELT TENSION See figure 16.11

After the first 50 work hours, adjust the tension of the PTO belts:

- 1) Fully engage the PTO.
- 2) Make sure the tensioned spring is 118 mm \pm 1 mm.
- 3) If it is less than this, adjust screw A and screw B.
- 4) Disengage the PTO.

16.12 CLEANING THE MACHINE See figure 16.12**16.13 OIL TANK FILTERS** See figure 16.13

1. Transmission pump oil filter
2. Service pump oil filter

16.14 PTO GREASING NIPPLE See figure 16.14**16.15 GREASING THE PEDAL** See figure 16.15

Refer to the maintenance table.

16.16 TURBINE BELT ADJUSTMENT SPRING See figure 16.16**16.17 PTO SPRING TENSIONING** See figure 16.17**16.18 PLATFORM OPENING** See figure 16.18

- Lifting grass catcher. Put safety locks on cylinders
- Remove the platform fixing nuts
- Lift the platform
- To close the platform, do the reverse operation
- Tighten the nuts with the indicated tightening torque

17. SPECIAL MAINTENANCE

Contact an authorised service workshop when special machine maintenance is required.

18. MACHINE INACTIVITY

If the FC3-261 machine has to be left unused for a long time, you are advised to follow these steps to ensure it remains in good working order for a long time:

- Disconnect the attachment from the machine and follow the steps indicated in the use and maintenance manual to put it "out of service".
- Follow all the indications provided in the use and maintenance manual of the motor to put it "out of service".
- Remove the battery and store it in a dry and ventilated place.
- Thoroughly check and clean the machine by paying special attention to where incrustations have formed due to residues of soil and grass.

Perform the "routine maintenance" operations described above and, if necessary, also perform "special maintenance" tasks.

- Park the machine on a level surface in a dry, well-ventilated area, covering it with a suitable non-waterproof protective sheet.

During inactivity periods, always keep the tyres at the indicated pressure and turn them at intervals to vary the support point on the ground.

19. DRIVING ON THE ROAD

This machine is fitted / available with general lighting kits and road related devices, it is important to consult with your local jurisdictions road authority to ensure that all requirements for registration of the machine are satisfied when registering the machine for road use. Always comply with road rules / laws.

NOTE: Before driving on roads open to traffic, make sure you are familiar with the machine controls.

20. SAFETY LABELS

See figure 20.

20.1 KEY

See figure 20.1

LABEL NUMBER	DESCRIPTION
1	Maximum permitted tilt
2	Do not go on slopes with elevator open
3	Turbine hazard
4	Elevator hazard
5	Blade coupling
6	Parking brake
7	Machine moving, keep a distance
8	Keep a distance, moving parts
9	Warning sign: Stop the engine, remove the key, read the manual before carrying out repair or maintenance work
10	Do not approach the machine until all the parts are stationary
11	Risk of crushing. Do not stand between the machine and the attachment
12	Read the instruction manual before using the machine

LABEL NUMBER	DESCRIPTION
13	Do not put your hands near the transmission shaft
14	Danger flying objects
15	Keep at a safe distance
16	Do not put your hands near the fan blades
17	Do not put your hands near the transmission belts
18	Battery cut-off switch
19	Lifting point
20	ROPS safety
21	Risk of crushing upper limbs when returning the grass catcher to the closed position Prohibition of protruding body parts beyond the backrest Correct position must be maintained at all times
22	Protect your hearing
23	Protect your eyes
24	Attention hot area

21. GENERAL NOTES

- A) For technical interventions not covered by this manual, contact one of our authorised assistance centres
 B) Keep the use and maintenance manual in a safe place and do not modify it. This manual may be modified without prior warning to include variations and improvements to units already consigned. The reproduction or translation of any part of this manual IS forbidden without written consent from the owner.

EN

22. MAINTENANCE TABLE

MAIN MAINTENANCE TASKS	FIRST TASK HOURS	FREQUENCY					NOTES	FIG.
		DAILY	WEEKLY	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 500 HOURS		
CLEANING OF RADIATOR GRILLE		X+						16.7
CHECKING PTO BRAKE IS WORKING	50				X			16.17
BELT CHECK	5		X					16.11
CLEANING OF CONTAINER FILTER		X+					●	16.12
CLEANING OF HYDRAULIC DRIVE		X					●	16.12
BLADE SHARPENING				X+				
GENERAL OVERALL CLEANING		X					●	16.12
GENERAL PRECISION CLEANING			X				●	16.12
GREASING				X				16.14 16.15
WHEEL DRIVE OIL LEVEL					X			16.4
HYDROSTATIC DRIVE AND HYDRAULIC SYSTEM OIL LEVEL					X			16.3
CHANGING HYDROSTATIC DRIVE OIL						X+		16.3
CLEANING AIR FILTER		X+						16.6
ENGINE OIL LEVEL								16.1
CHANGING ENGINE OIL								16.1
CHANGING PRESSURE OIL FILTER CARTRIDGE	50					X		16.13
CHANGING FUEL FILTER					X+			16.9
CHANGING AIR FILTER								16.6
COOLANT LEVEL		X						16.2
CHANGING COOLANT								16.2
ENGINE MAINTENANCE								16.1
CHANGING SUBMERGED FILTER						X		16.13
CHANGING ENGINE OIL FILTER CARTRIDGE								16.8
TYRE PRESSURE CHECK			X					16.10
WHEEL BOLT TIGHTENING CHECK			X					16.10
CHECKING HYDRAULIC PIPES					X		*	

+ If the work conditions are particularly demanding, the tasks must be performed more frequently.

 Engine maintenance: refer to the engine User and Maintenance Manual.

● These cleaning tasks should be done using compressed air if possible. Avoid using water.

* Contact an authorised assistance centre.

23. ERROR CODES

PHASE	ERROR CODE	DESCRIPTION OF THE ERROR/ALARM	POSSIBLE CAUSES AND/OR SOLUTIONS	NOTES
ANY	CC1	Short-circuit on the command line of the glowplug pre-heating relay	Check the glowplug pre-heating relay	Pre-heating is inhibited by the control unit. Code on the display + 1-second acoustic alarm repeated 3 times
	CC2	Short-circuit on the starter relay command line	Check the starter relay	Start-up is inhibited by the control unit. Code on the display + 1-second acoustic alarm
	CC3	Short-circuit on the buzzer line	Check the buzzer	The buzzer is inhibited by the control unit. Code on the display
	CC4	Short-circuit or open circuit on the stop lights line	Check the stop lights circuit	The stop lights command is inhibited by the control unit. Code on the display + 1-second acoustic alarm
INITIAL	1	Measured temperature higher than the permitted value	Sensor damaged or earth connection	Three dashes in place of the T value. Code on the display + 1-second acoustic alarm
	2	Measured temperature lower than the permitted value	Sensor damaged or disconnected or temperature below 0°C.	Three dashes in place of the T value. Code on the display + 1-second acoustic alarm
	10	The safety test has found the PTO engaged.	Disengage the PTO.	
	11	The safety test has found the parking brake disengaged.	Engage the parking brake.	
	12	The safety test has detected that the user is not sitting on the seat.	Sit on the seat.	
	14	The safety test has detected the engine compartment open.	Close the engine compartment.	
	25	Hopper open	Close the hopper	
	27	50-hour maintenance not carried out	Carry out the 50-hour maintenance	The spanner symbol appears on the display
	28	100-hour maintenance not carried out	Carry out the 100-hour maintenance	The spanner symbol appears on the display
29	500-hour maintenance not carried out	Carry out the 500-hour maintenance	The spanner symbol appears on the display	
OPERATING CYCLE	20	The safety test has found the PTO engaged.	Disengage the PTO.	
	21	The safety test has found the parking brake disengaged.	Engage the parking brake.	
	22	The safety test has detected that the user is not sitting on the seat.	Sit on the seat.	
	24	The safety test has detected the engine compartment open.	Close the engine compartment.	
	30	The hopper is full, with the PTO engaged	"Hopper full" microswitch pressed	Intermittent buzzer sound: this is a particular operating condition, not an error
	32	Hydraulic oil filter clogged	Replace the filter	Code on the display + 1-second acoustic alarm
	36	Control unit button jammed	Check the button is working properly	Code on the display + 1-second acoustic alarm
	37	Distribution solenoid valve	Check the timed relay	
	38	Engine temperature above 105°C	Make sure the radiator is clean	Flashing T on the screen and intermittent buzzer sound.
40	Insufficient engine oil pressure	Check the oil level	Intermittent buzzer sound and indicator light ON.	

24. ROLLOVER PROTECTION STRUCTURE (ROPS)

See figure 24.

0.

2 7 3 4

1

Kubota Gianni Ferrari S.r.l. - via Vespucci, 53 - 42046 Reggio (RE) - Italy

MODEL

TYPE

MASS
[kg]

POWER
[kW]



6

FC3-261

KGA

1000

18,2


Multifunction
Tools Carrier

Year 2023

00555200574


5
8





1.

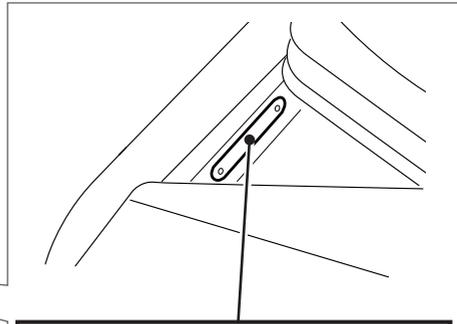


000000 XXXX


6.1

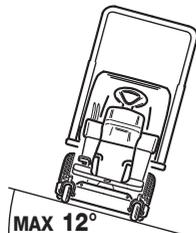


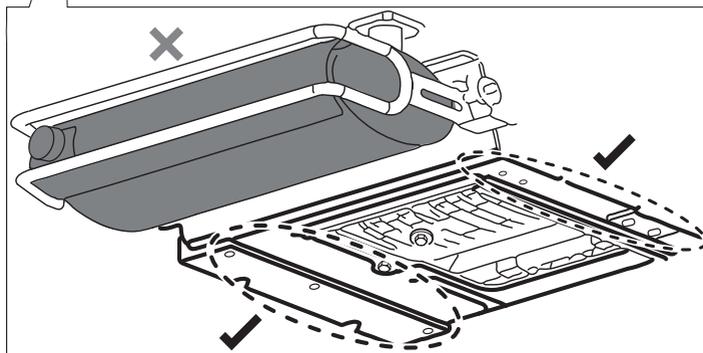
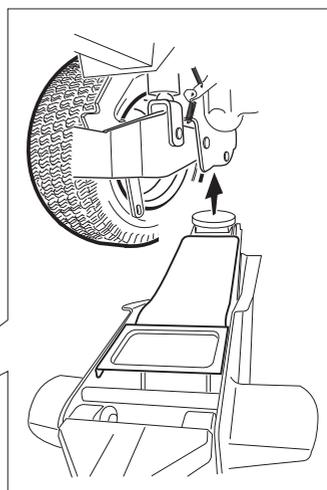
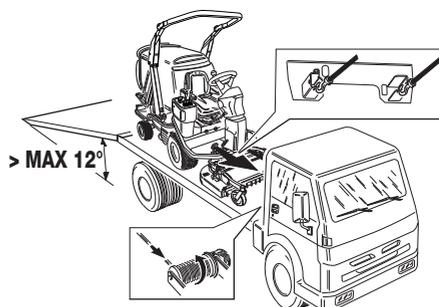
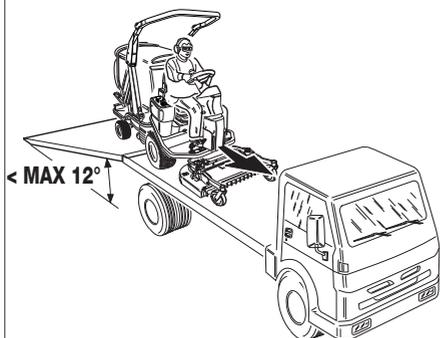




6.2

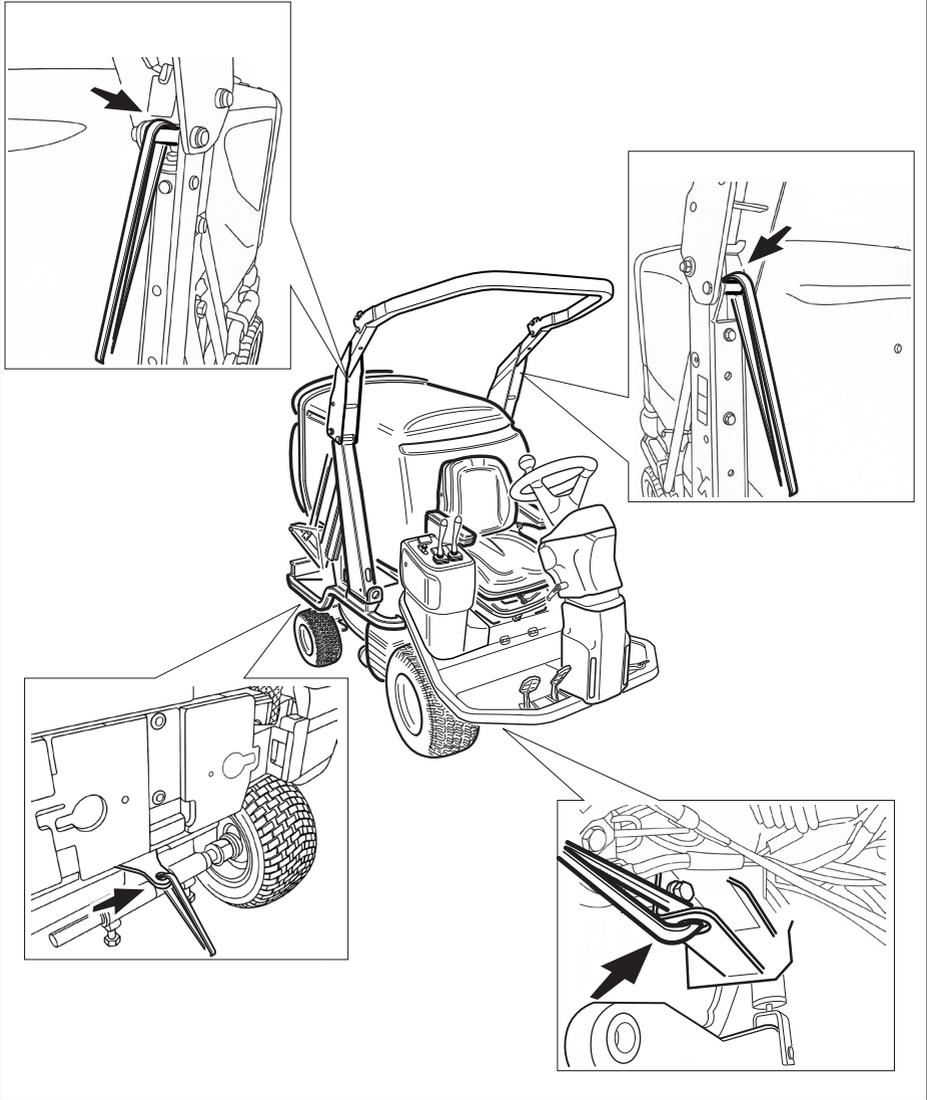


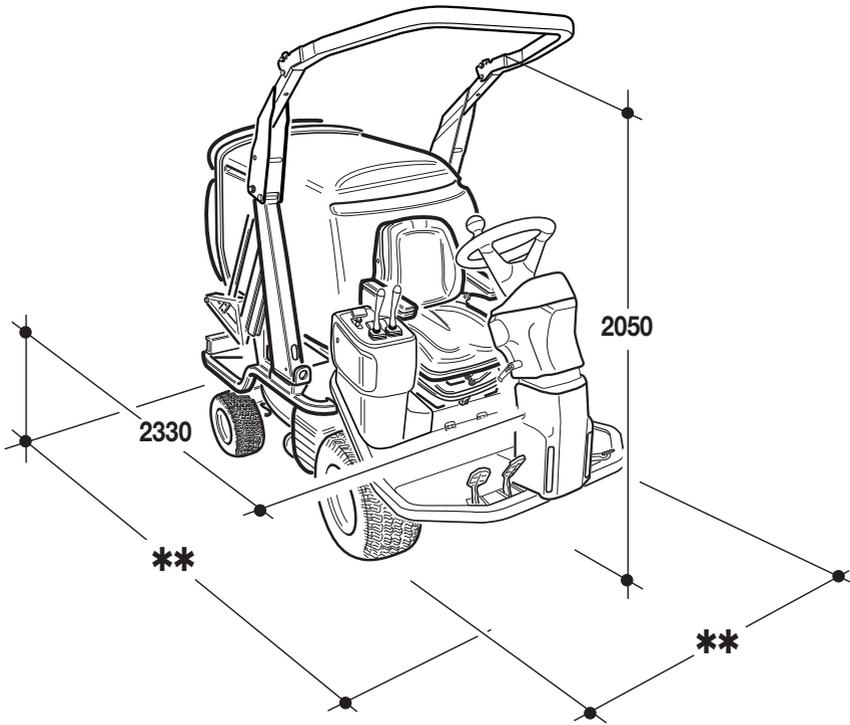



7.2

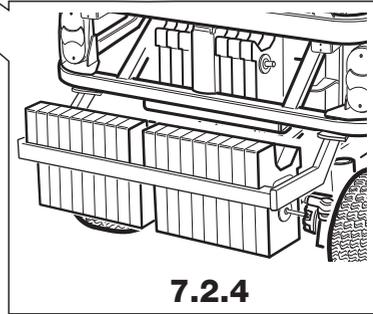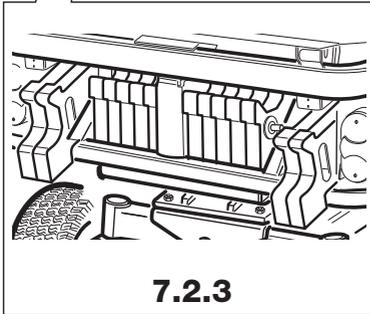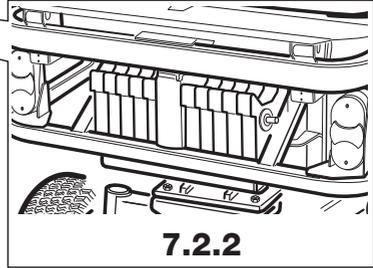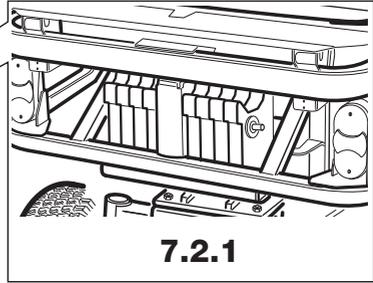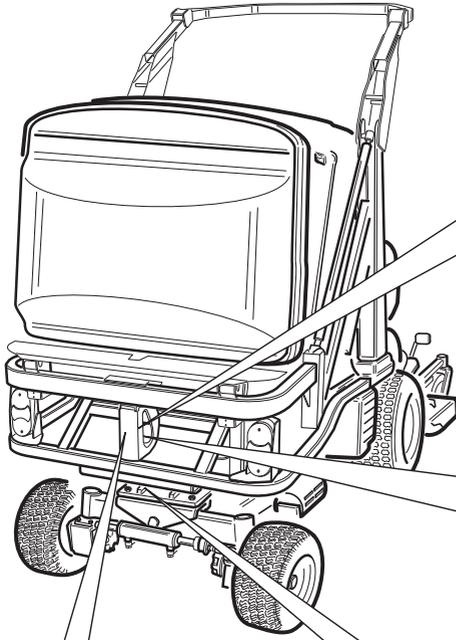


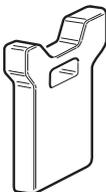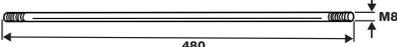 x 8	A	 M8	x 2
	B	 ø 50 M8	x 2
	C	 480 M8	x 1



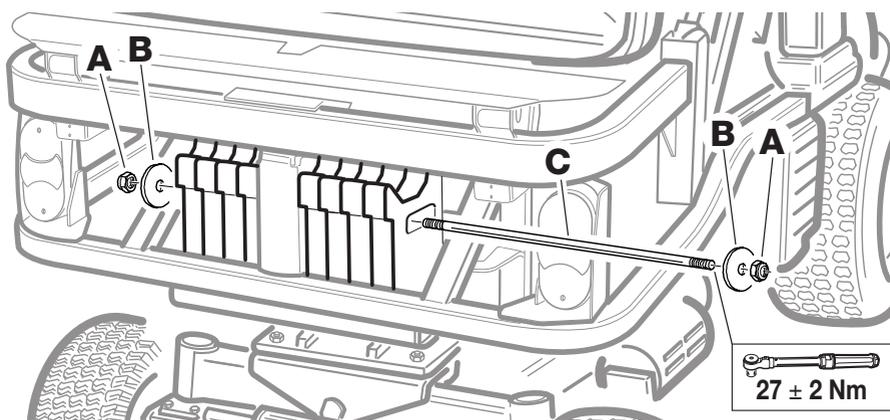


7.2.2

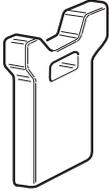
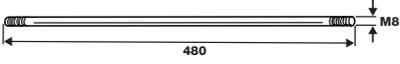
 x 10	A	 M8	x 2
	B	 Ø 50 M8	x 2
	C	 480 M8	x 1

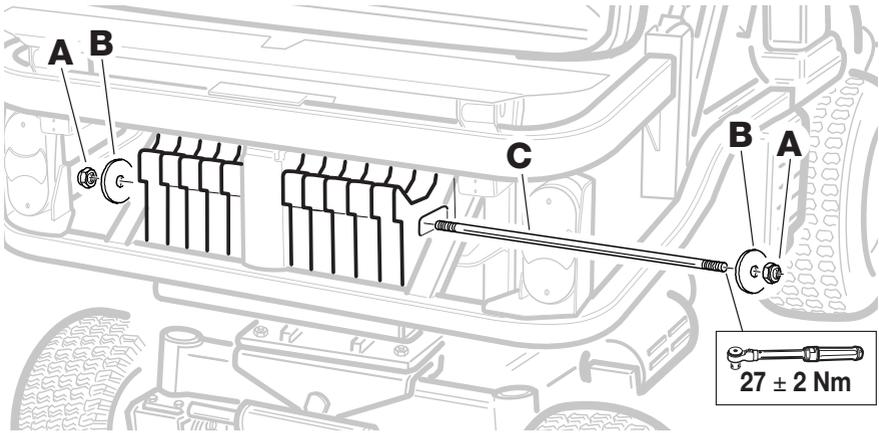


1

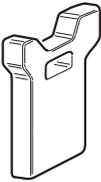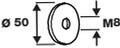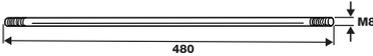
 <p>x 10</p>	A	 <p>M8</p>	x 2
	B	 <p>∅ 50</p> <p>M8</p>	x 2
	C	 <p>480</p> <p>M8</p>	x 1

2

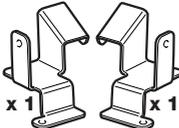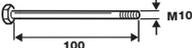
 <p>x 4</p>  <p>x 1</p> <p>x 1</p>	D	 <p>100</p> <p>M10</p>	x 2
	E	 <p>M10</p>	x 2
	F	 <p>∅ 21</p> <p>M10</p>	x 2

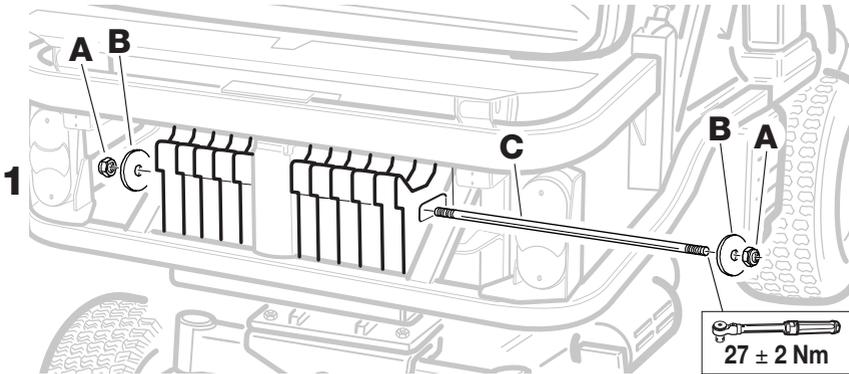


7.2.3

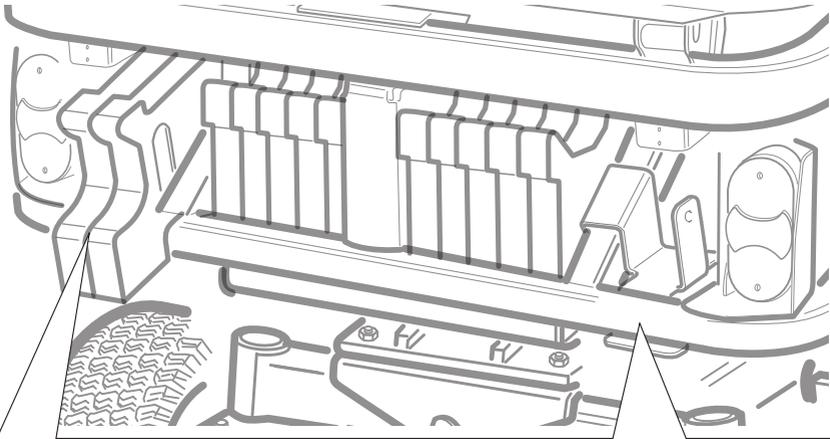

2

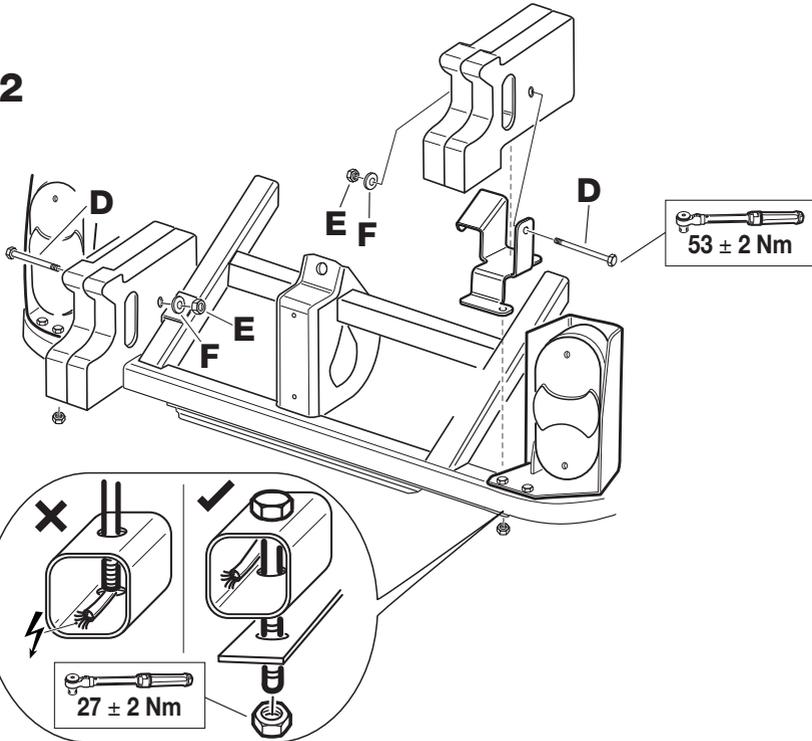

1

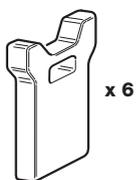

x 6

A



x 2

B



x 2

C




x 1

2



x 18

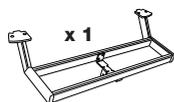

x 1

A



x 4

B




x 4

C




x 2

H

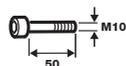

x 2

I

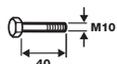

x 1

J




x 6

K



x 4

L

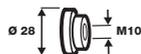

x 1


M




x 4


7.2.4

1

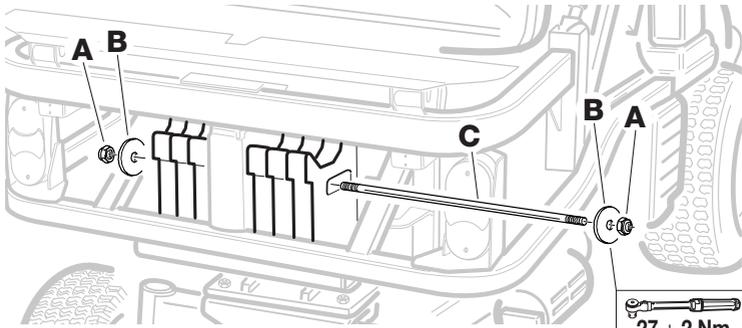


2


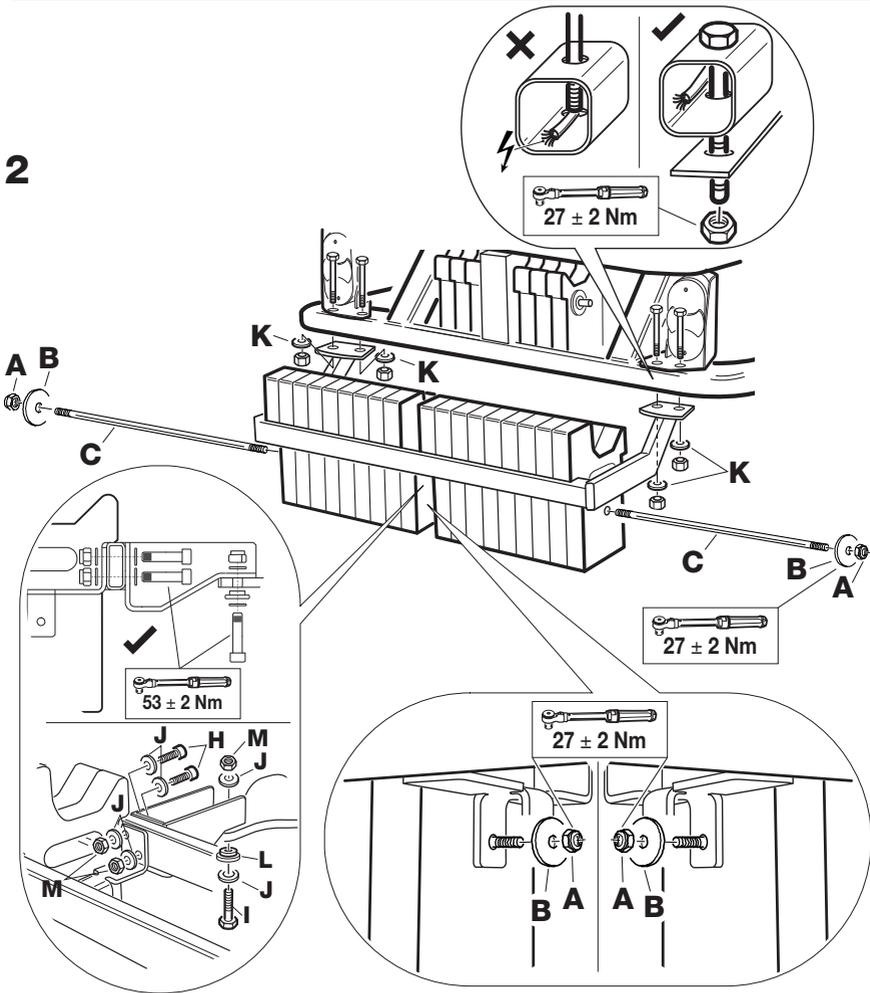


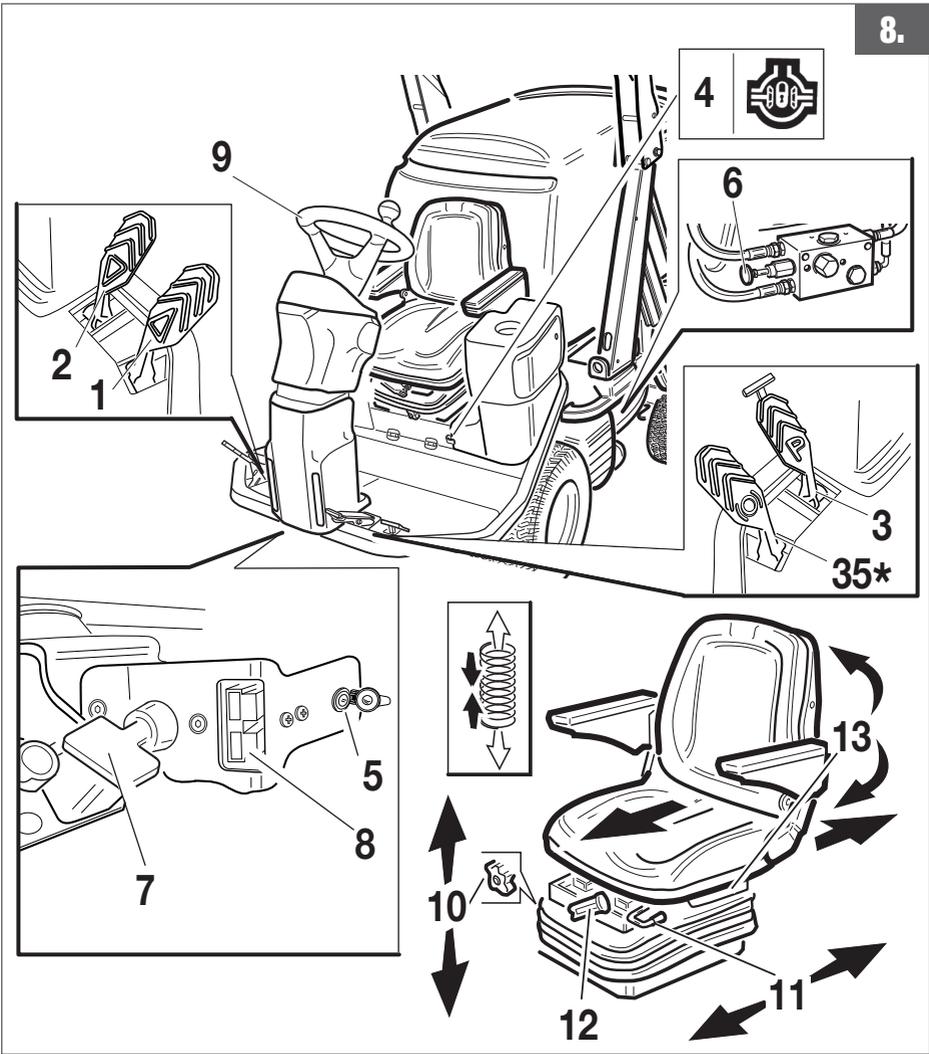





8.

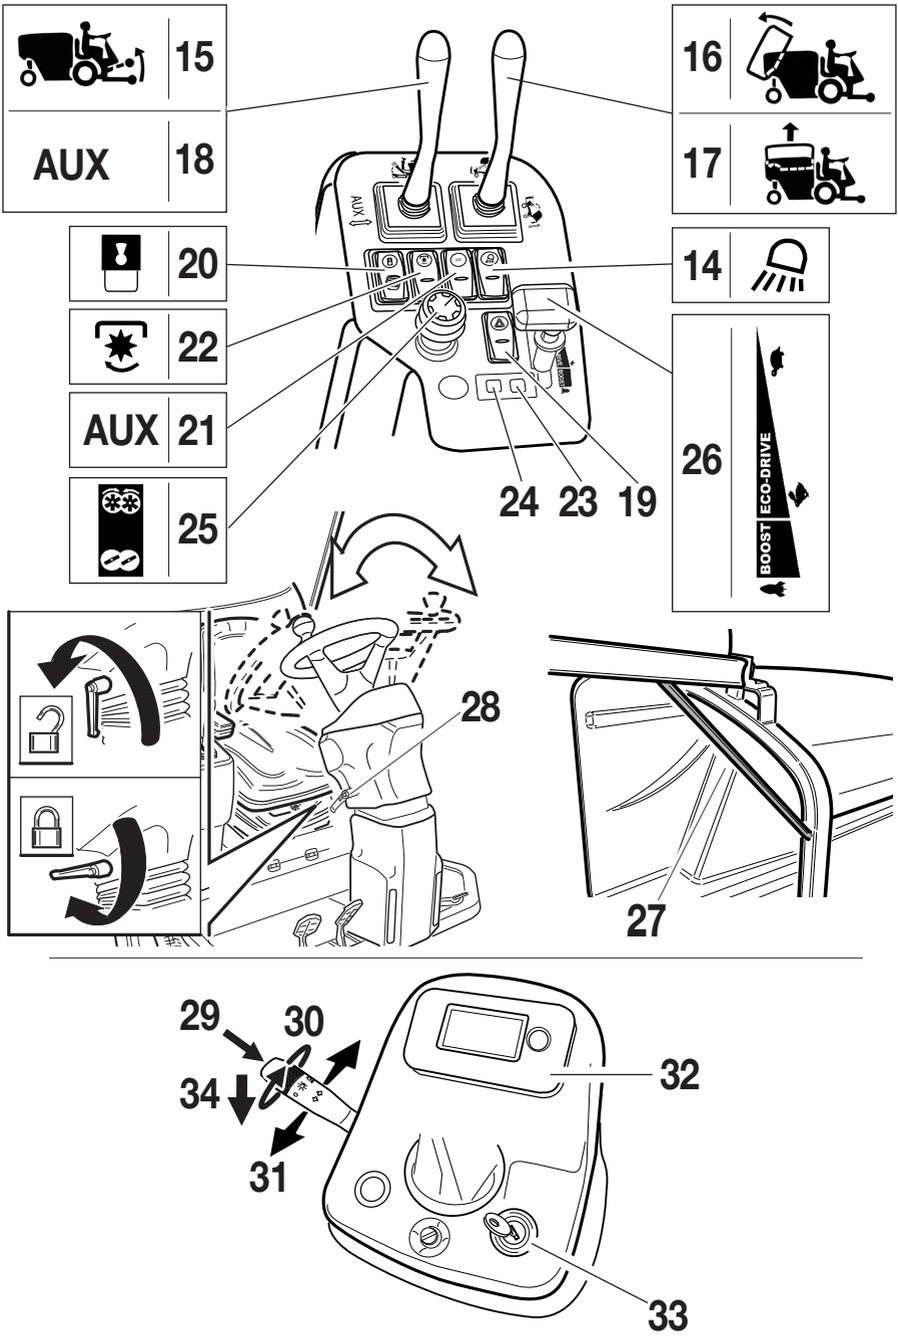




9.1

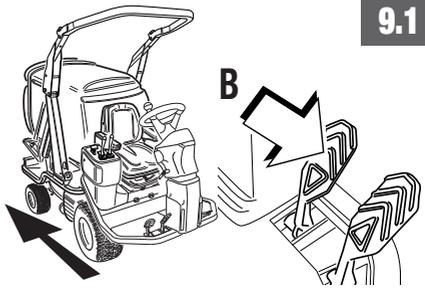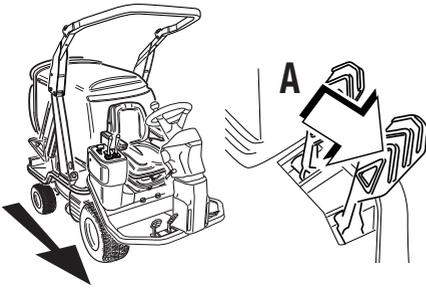



9.2

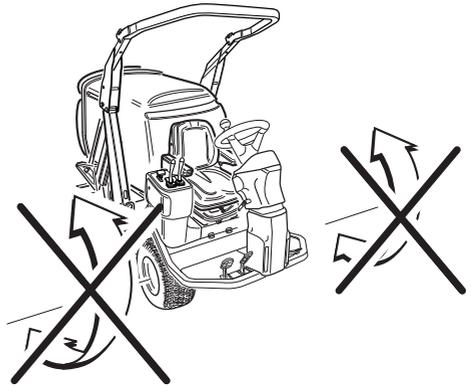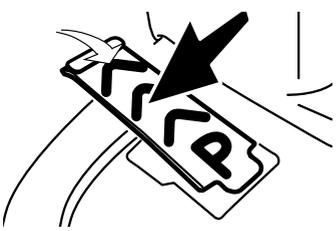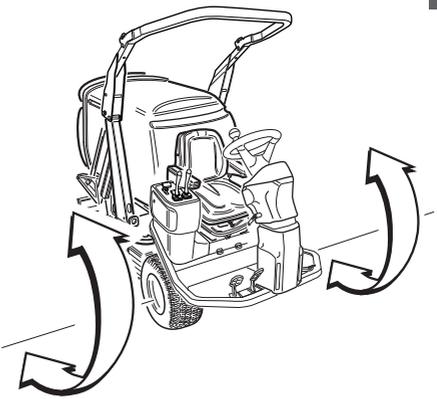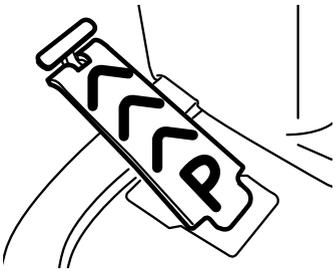



9.3

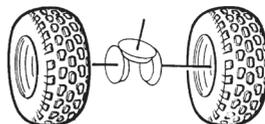
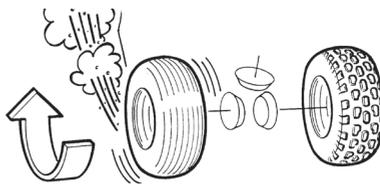
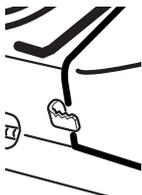


9.4


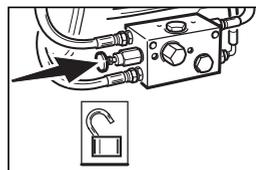
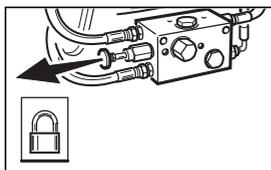


9.5

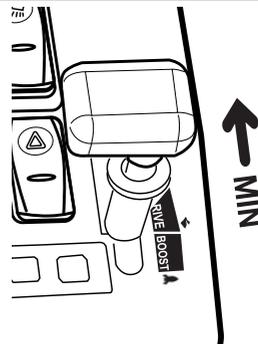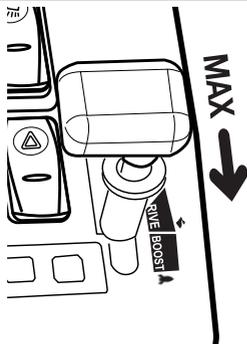


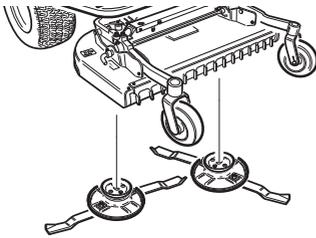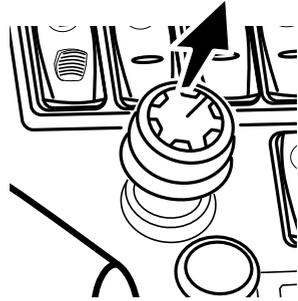
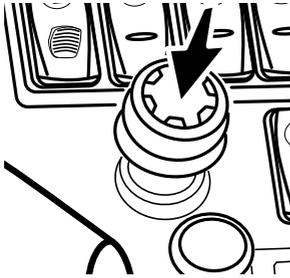






STOP!!

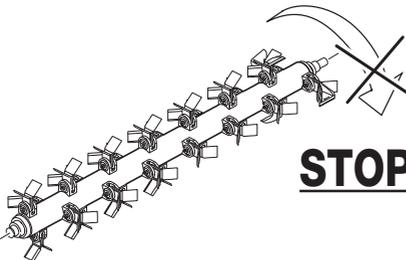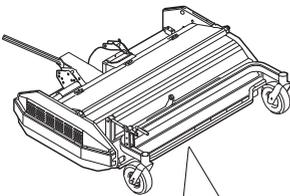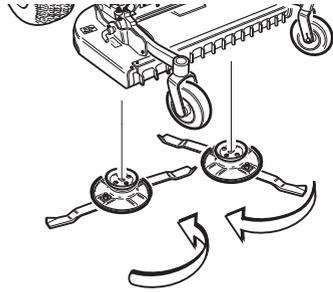


STOP!!

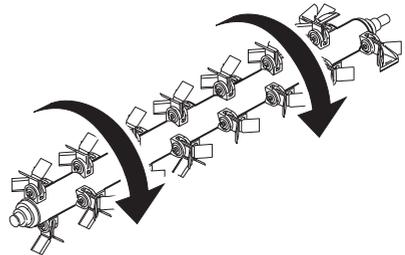

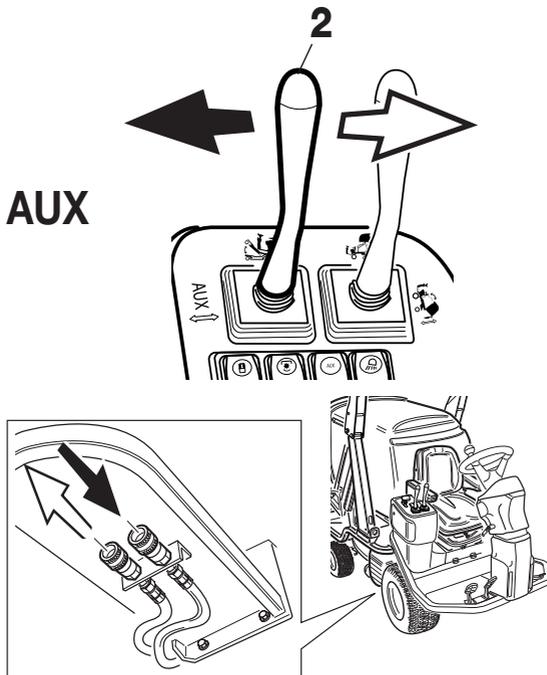
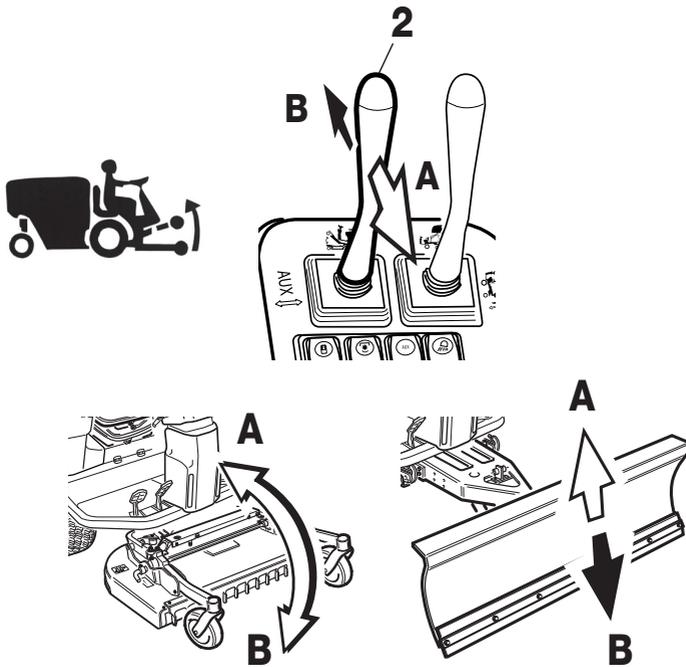


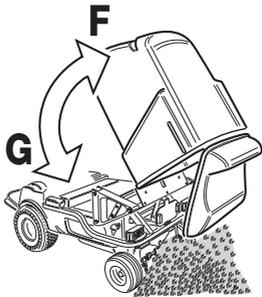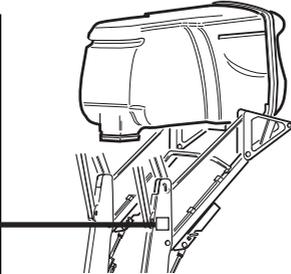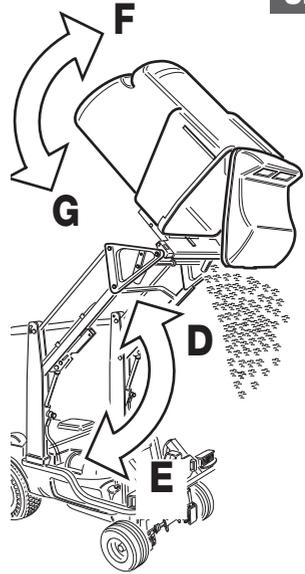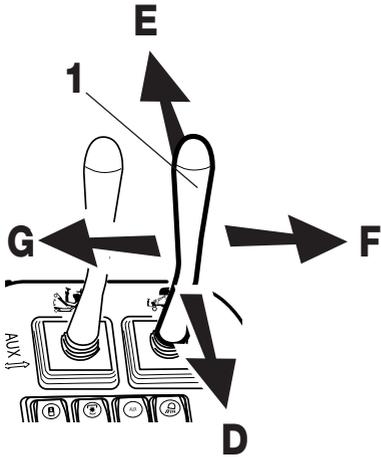

9.9

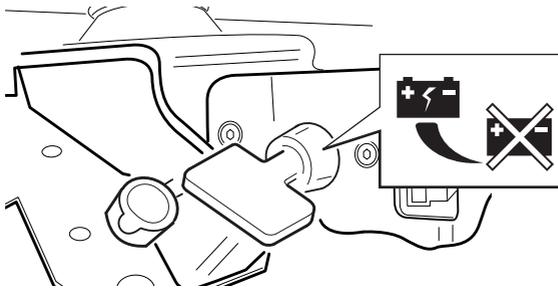


9.10

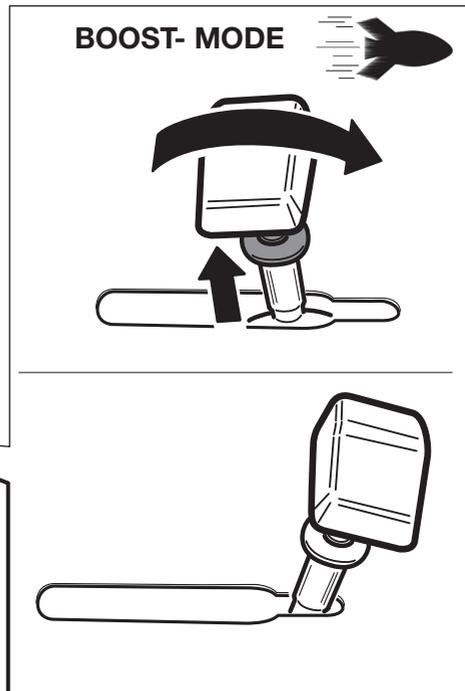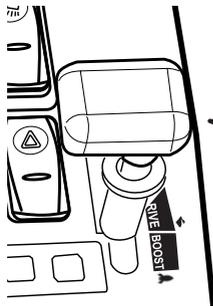


10.1a



10.2

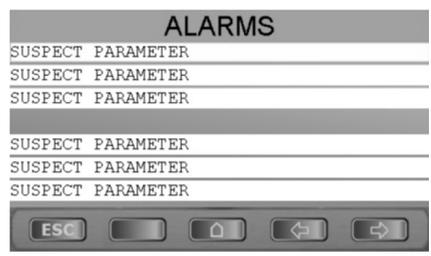


10.1b

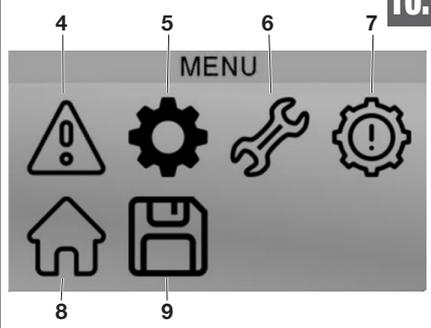


10.3




10.4

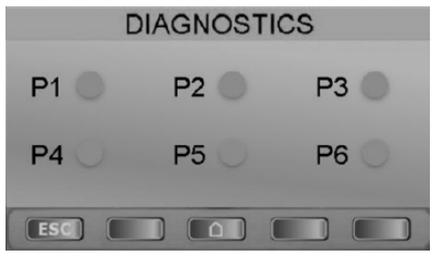

10.5a

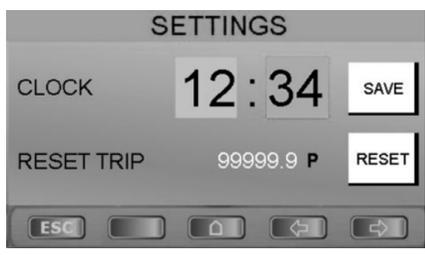

10.5b

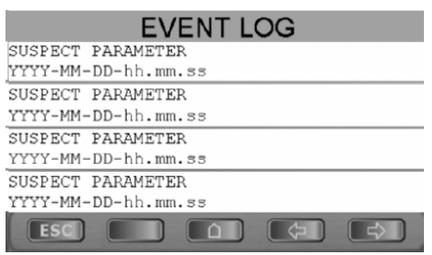


11.


1




2

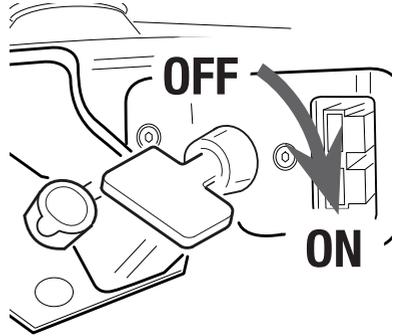


3

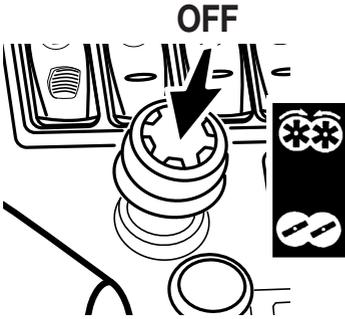


4




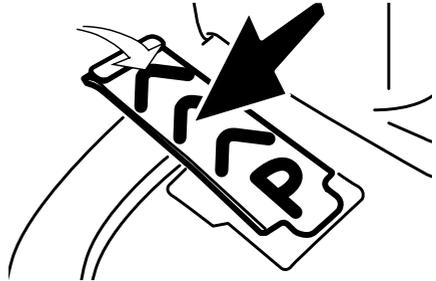


5

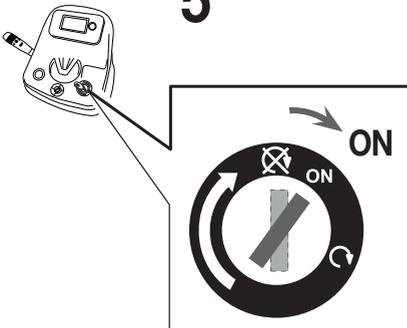

6

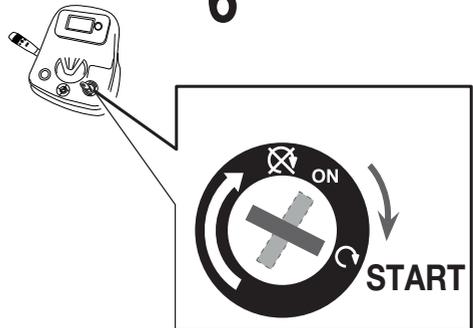

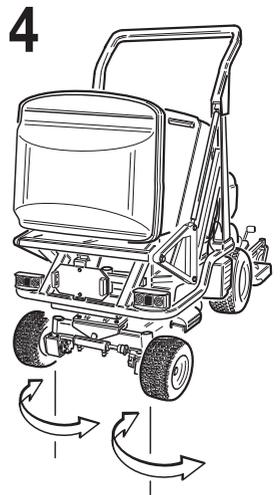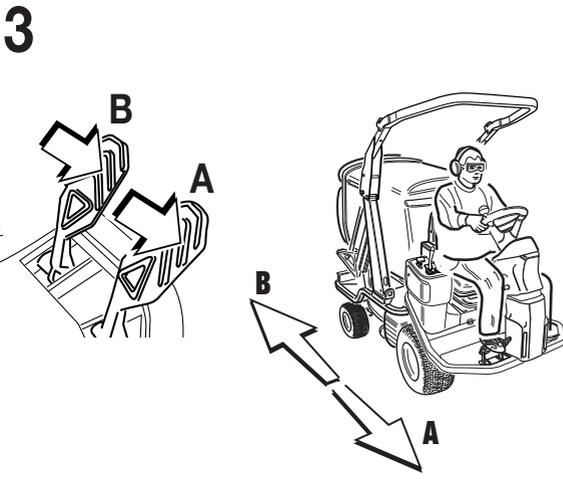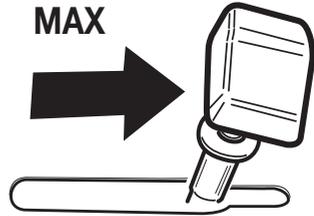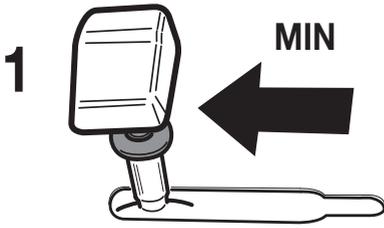


13.

1




2

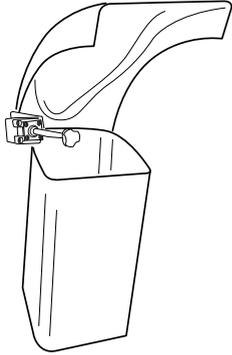

3



4

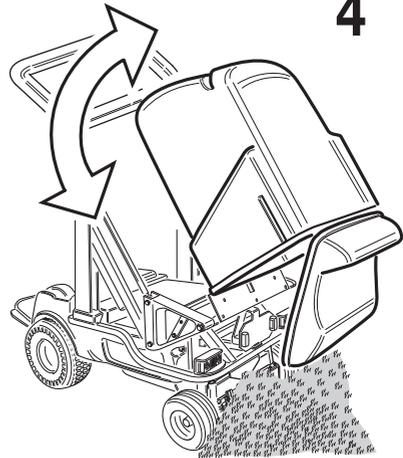







15.

OK




NO

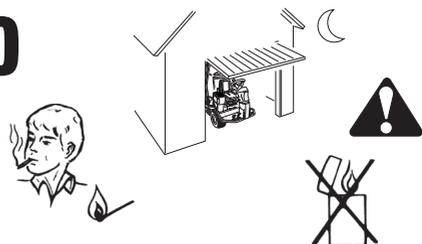

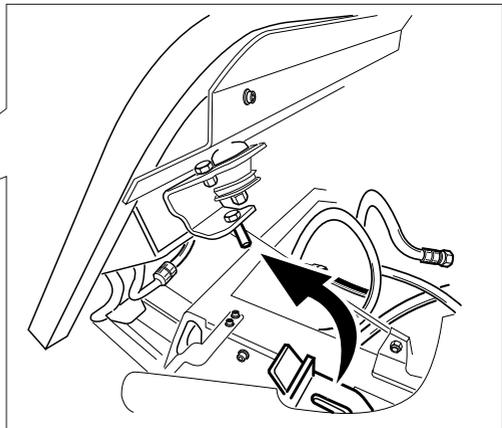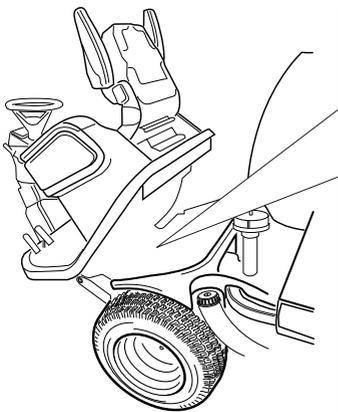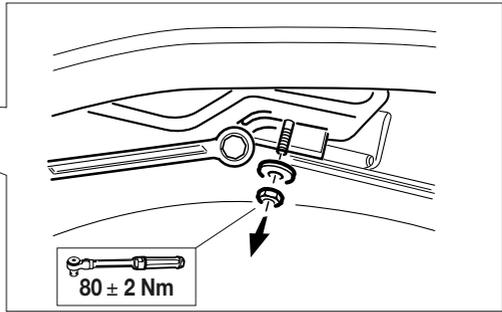
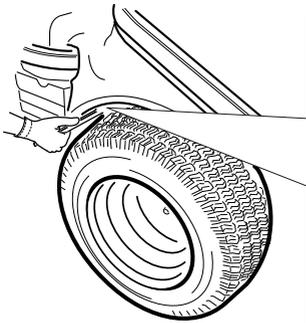
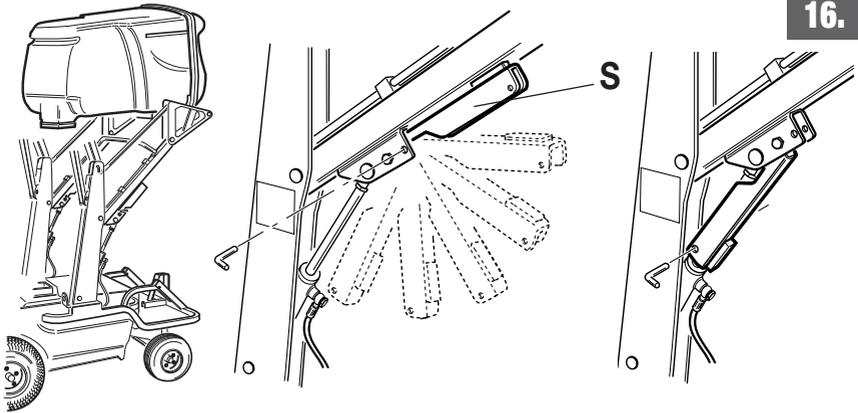


16.1

KUBOTA D1105

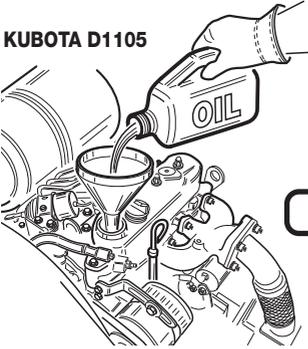

API CF

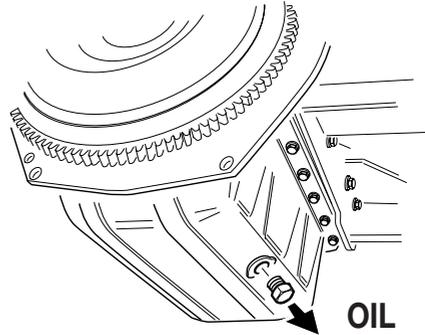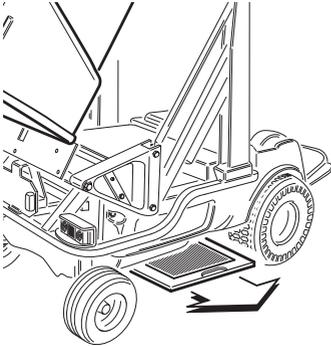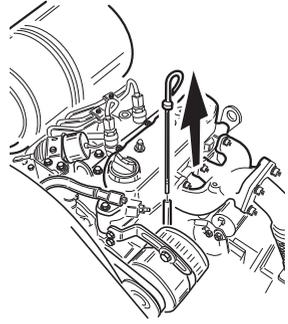


16.2



MAX
MIN


16.3

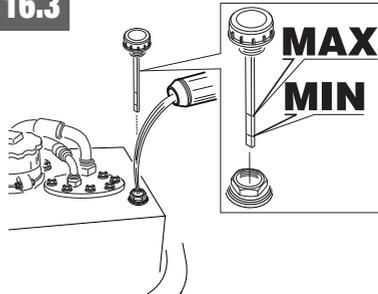


MAX
MIN

SHELL HYDRAULIC S1 M 46



16.4

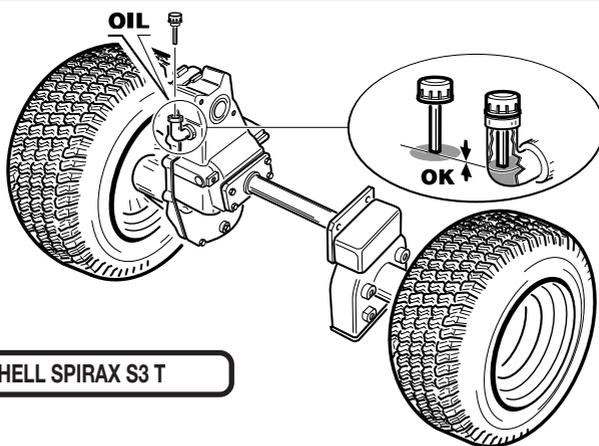


16.6

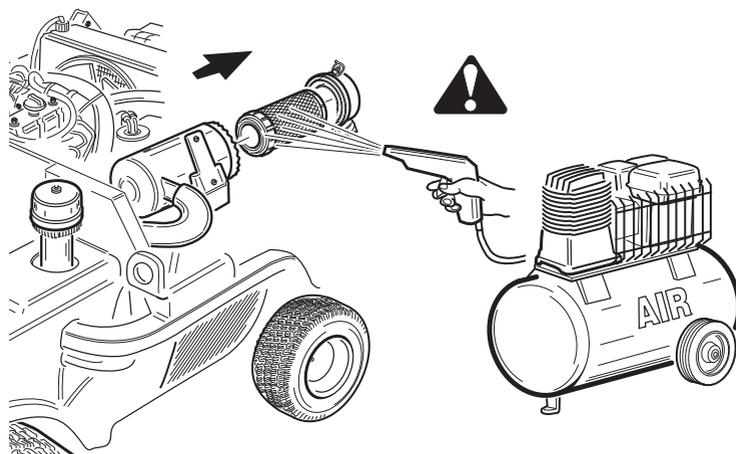


16.7

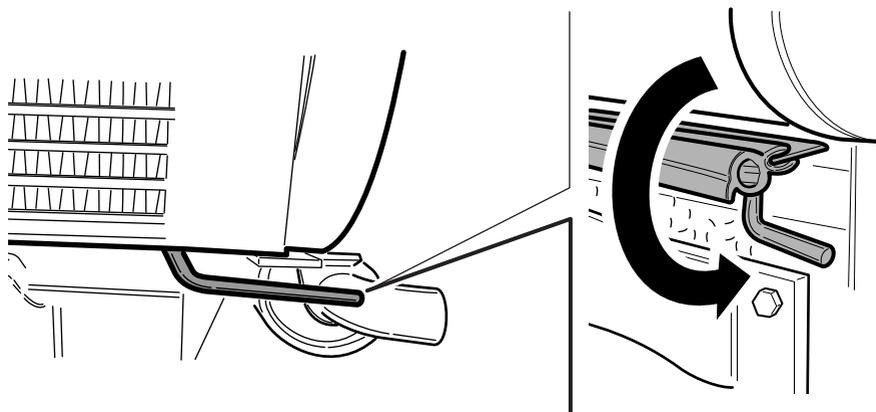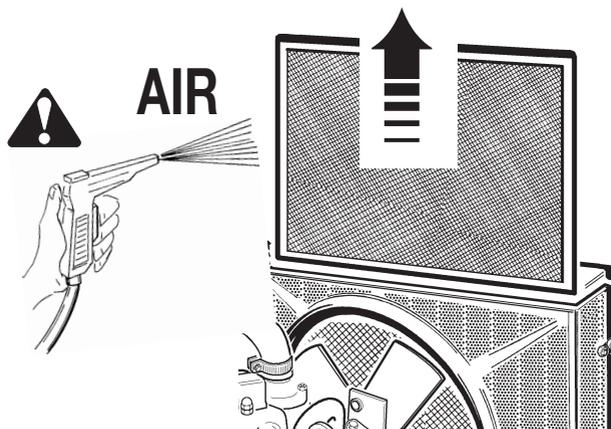

16.8

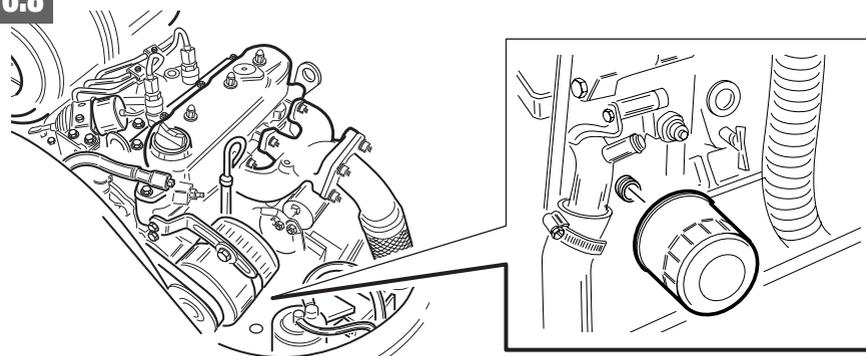

16.9

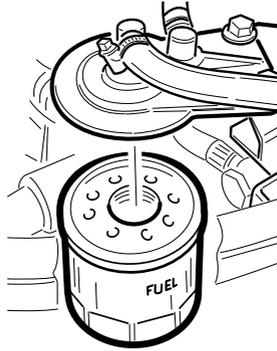

16.10



16" 1,5 bar




91 ± 2 Nm

4 WD

23" 2 bar



91 ± 2 Nm

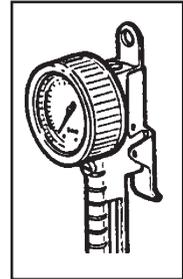

23" 2 bar





91 ± 2 Nm

16" 1,5 bar






91 ± 2 Nm


1

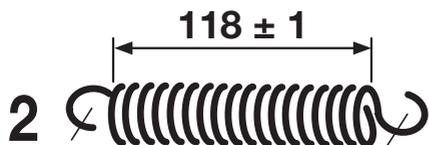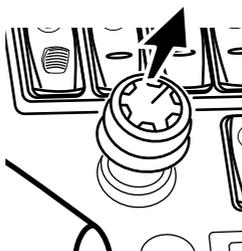


3

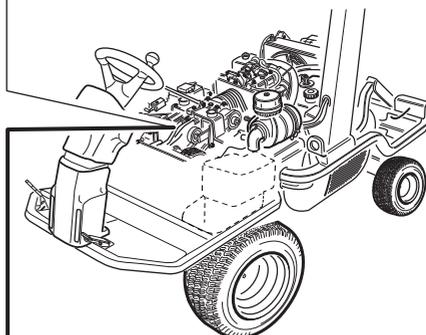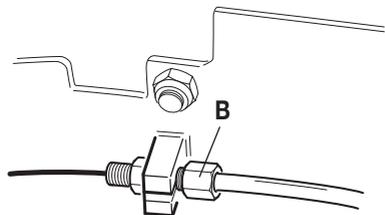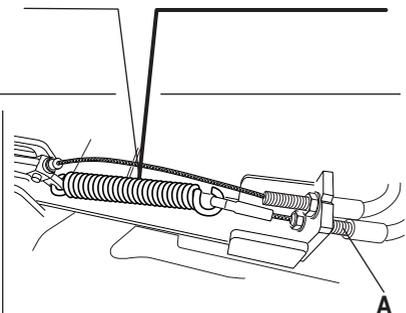


4

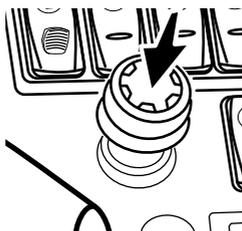


16.12

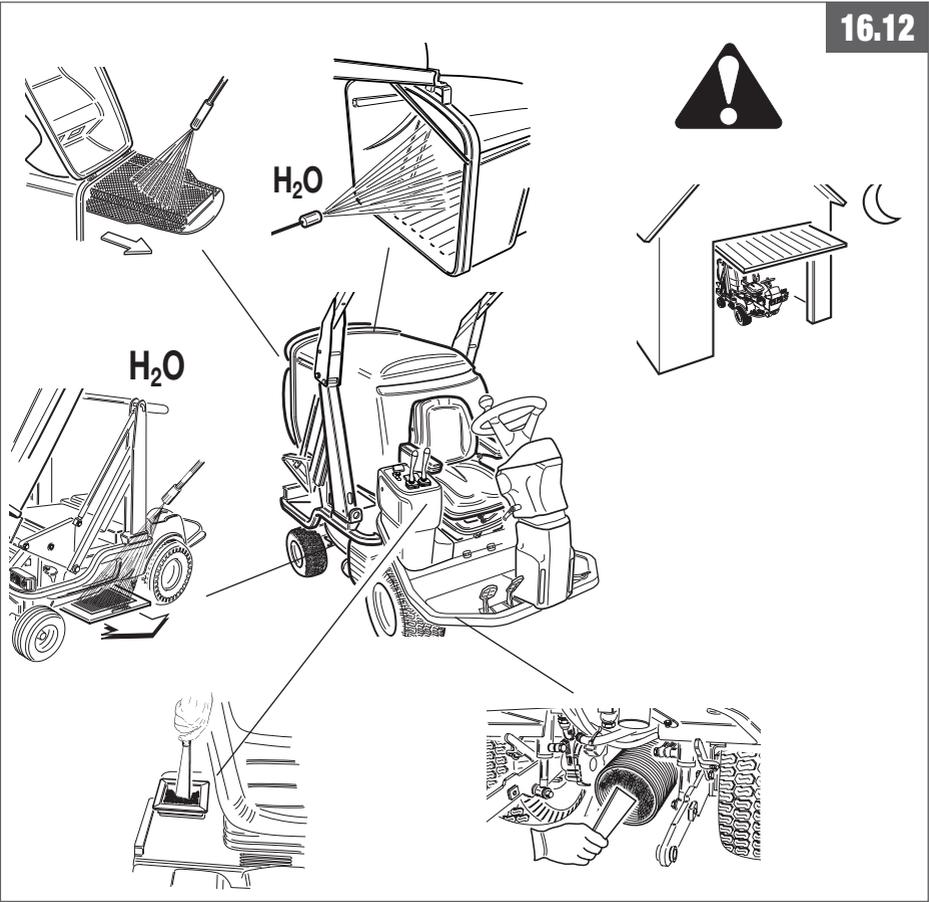



16.13

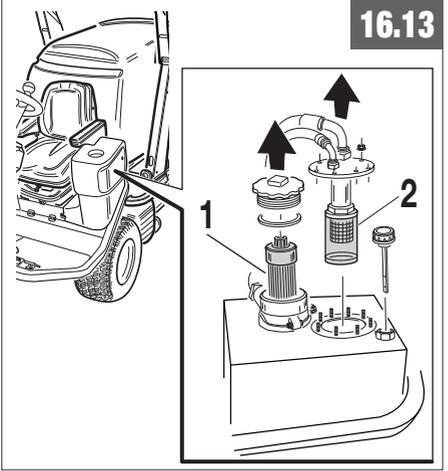



16.14

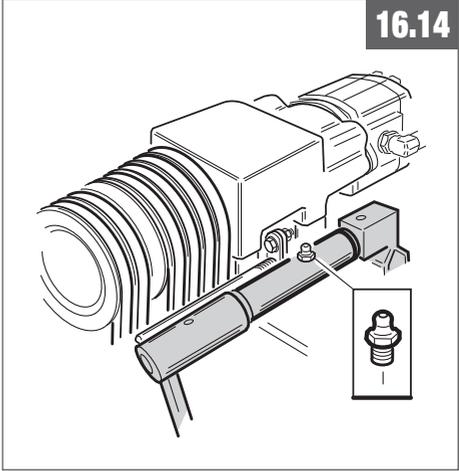



16.15

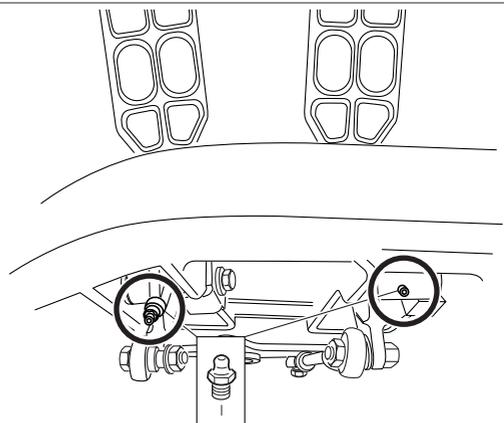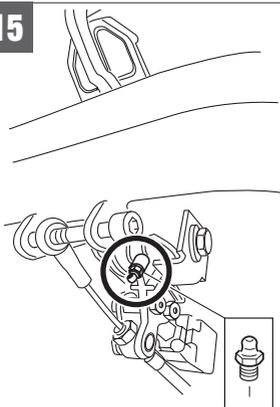



16.16



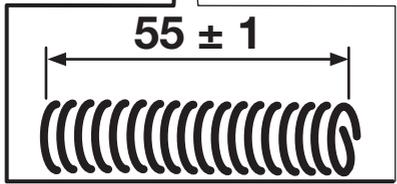
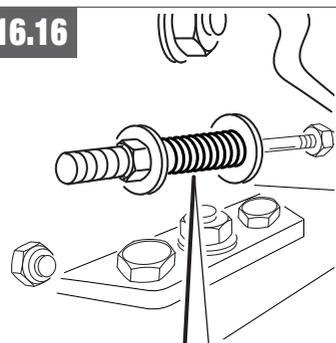


16.17

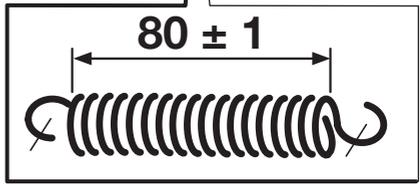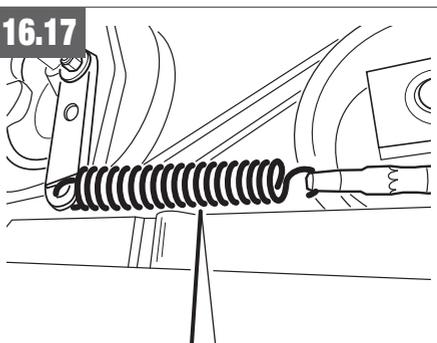


19.

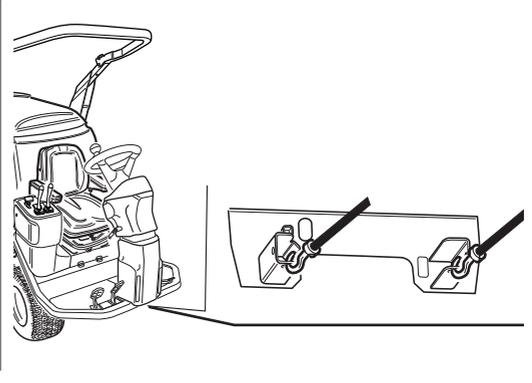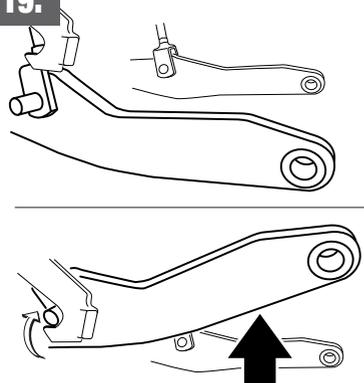

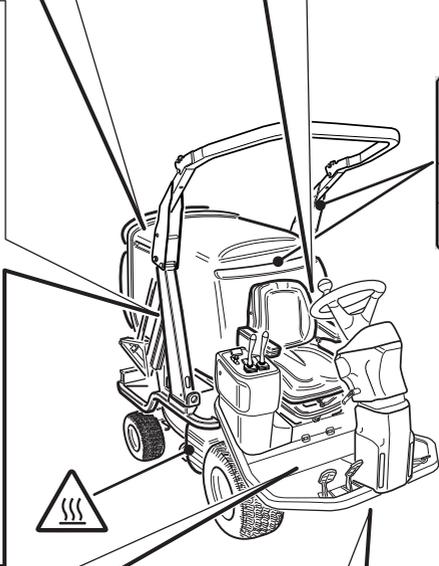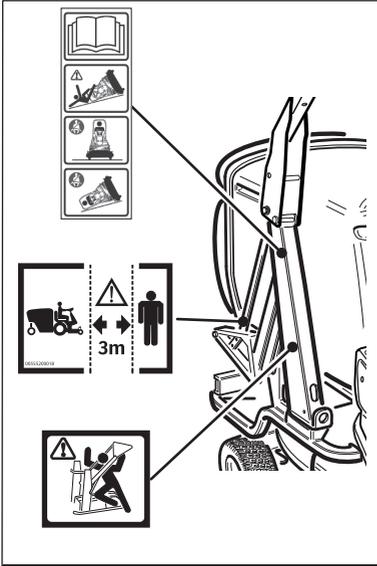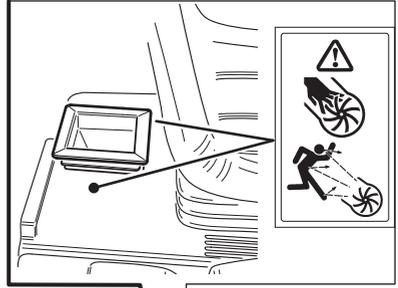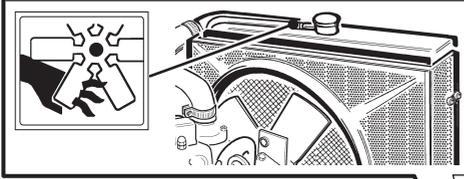


Fiskalski Glavni Posrednik d.o.o. - via Venezia, 57 - 40126 Reggiolo (MO) - Italy			
MODEL	TYPE	MAX. SPEED (km/h)	POWER (kW)
FC3-301	SEA	1000	18.2

CE
 Manufacture
 Mark Control
 Year 2012
 02002320100

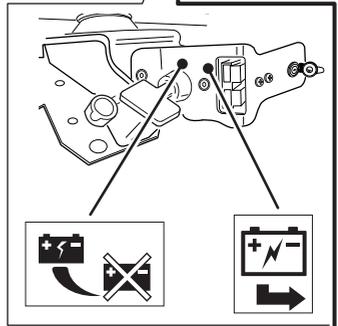

20.1

1

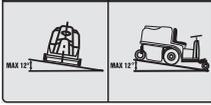

2



3



4



5




6



7



8

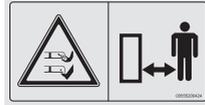

9



10



11



12



13



14



15



16



17



20



21



18



19



22




23




24





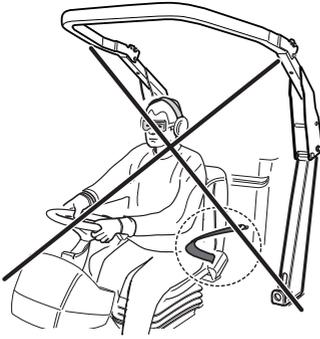



NO!!



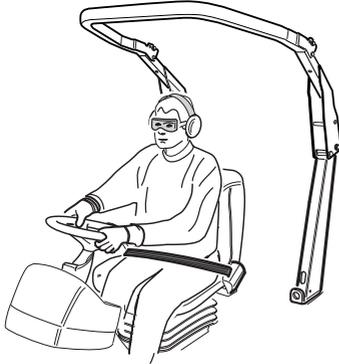


OK

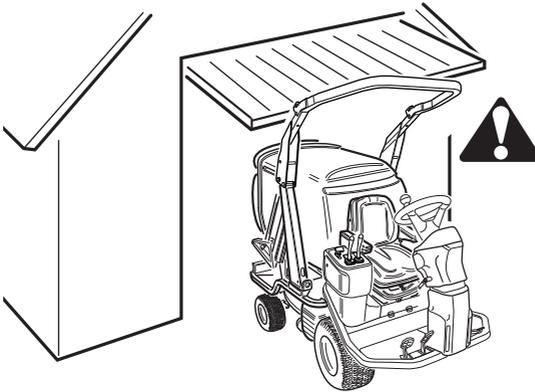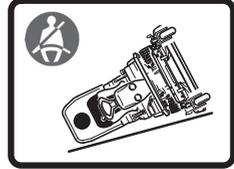

24.

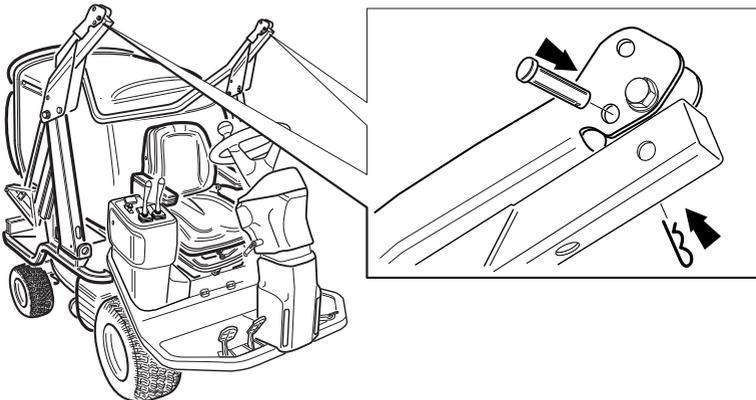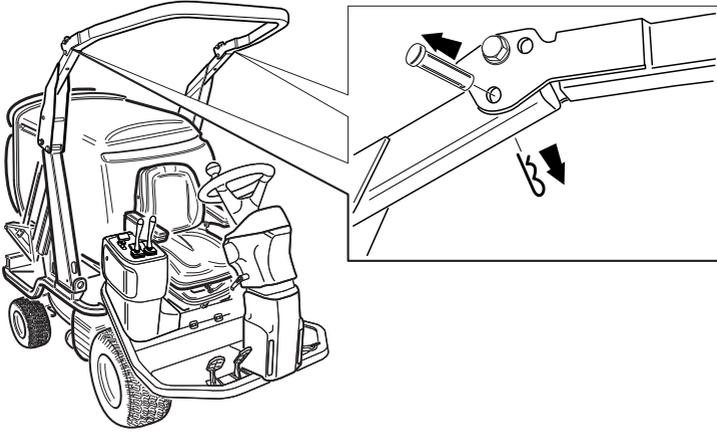

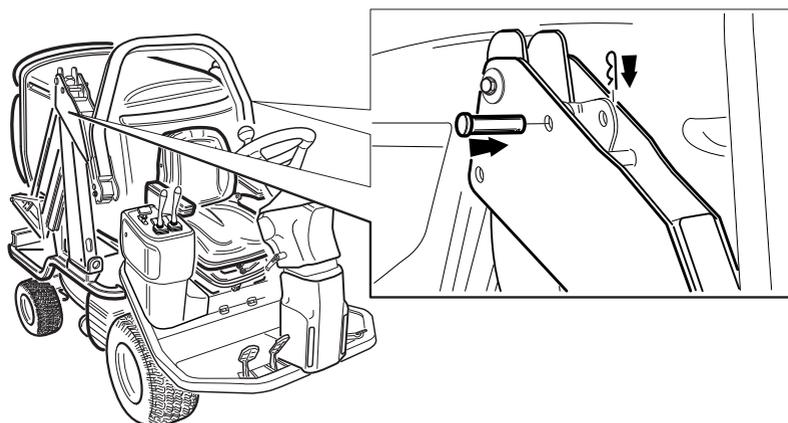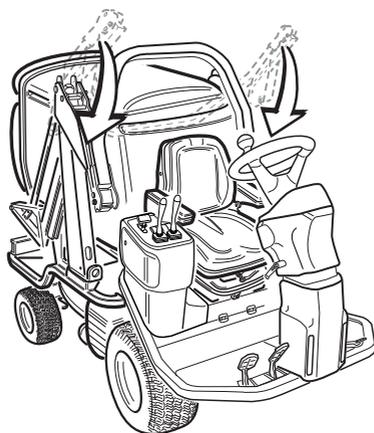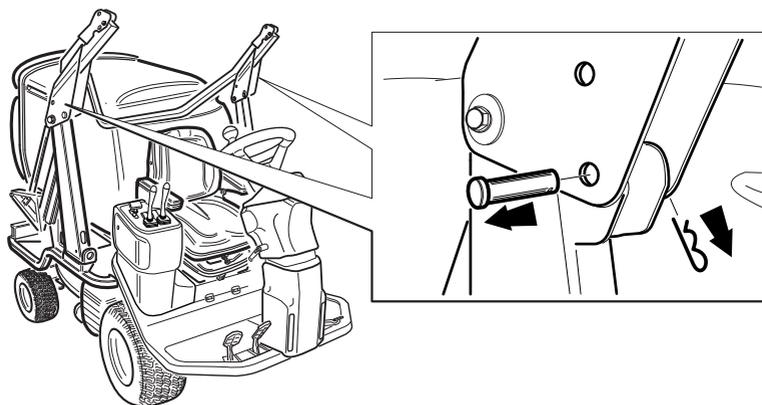

24.

